

FLEX TOASTER

Type 8004

User manual



CONTENTS

INTENDED USE	3
IMPORTANT SAFETY PRECAUTIONS	3
CONTENTS	6
APPLIANCE DESCRIPTION	7
CONTROL BUTTONS	8
INSTALLATION	8
TOASTING BREAD	9
USING THE DEFROST FUNCTION	9
USING THE REHEAT FUNCTION	10
USING THE MEMORY FUNCTION	10
CLEANING AND CARE	11
STORAGE	11
TECHNICAL SPECIFICATIONS	11
TROUBLESHOOTING	11
DISPOSAL	12
2 YEAR GUARANTEE	13
SOLIS CUSTOMER SERVICE	13

▲ INTENDED USE

- This appliance is intended to toast or heat various types of bread.
- Only use the appliance as described in this manual.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance is intended for indoor use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Any use of the appliance other than described in this manual is regarded as misuse and may cause injury, damage to the appliance and void warranty.

▲ IMPORTANT SAFETY PRECAUTIONS

GENERAL SAFETY INSTRUCTIONS

▲ WARNING

- Ensure you have fully read and understood the instructions in this user manual before you install or use the appliance. Keep this document for future reference.
- Do not use the appliance if a part is damaged or defective. Replace a damaged or defective appliance immediately.
- If the power cable is damaged, replace it with an original special cable or assembly available from the manufacturer or its service agent.

SAFETY INSTRUCTIONS REGARDING INSTALLATION

⚠ WARNING

- Do not drop the appliance and avoid bumping.
- Place the appliance on a stable, flat, heat and moisture resistant surface.
- Keep a minimum safety distance of 20 cm between the appliance and walls, curtains or other materials and objects and make sure that the air around the appliance can circulate freely.
- Do not place the appliance in direct sunlight.
- Do not use a timer or a separate remote-control system that switches on the device automatically.
- Do not leave the power cable hanging over table edges to prevent the appliance from being pulled down. Make sure that neither the appliance nor the power cord or plug comes into contact with hot surfaces, such as hotplates or a radiator, or that they come into contact with the appliance itself.
- Never place the appliance in such a way that it is at risk of falling into water or coming into contact with water resp. other liquids (e.g. in or near a sink).
- Never reach for an appliance that has fallen into water or other liquids:
 - Always wear dry rubber gloves to unplug the appliance before taking it out of the water.
 - Do not start using the appliance again before having it checked for functionality and safety by Solis or a service center authorized by Solis.

- Do not place the appliance directly under a power outlet.
- Switch off and unplug the appliance before moving the appliance.
- Fully unwind the power cable before use.

SAFETY INSTRUCTIONS REGARDING USE

⚠ WARNING

- Children must be supervised to ensure that they not play with the appliance.
- Do not operate the appliance with wet hands.
- Only use the appliance with the provided accessories or accessories recommended by Solis. Incorrect accessories or misuse can lead to damage to the appliance.
- Parts of the appliance may get hot during use. When the appliance is operating, only touch the control panel.
- Do not move the appliance when in use.
- Do not cover the air vents when the appliance is in use.
- Do not switch on the appliance when it is empty.
- Unplug the appliance when it is not in use.
- Let the appliance cool down before storage.
- Do not use cutlery or another metal object to remove a stuck piece of bread when the appliance is switched on. First switch off and disconnect the appliance.

SAFETY INSTRUCTIONS REGARDING MAINTENANCE

⚠ WARNING

- Disconnect the appliance from the power source before service and when replacing parts.
- Let the appliance cool down before cleaning.
- Never immerse the appliance in water or place it in a dishwasher.
- Do not use abrasive chemical cleaning agents such as ammonia, acid or acetone when cleaning the appliance. This can damage the appliance.

▲ CONTENTS

Please check the contents of the package:


1x FLEX TOASTER

1x Bun warmer

1x User manual

▲ APPLIANCE DESCRIPTION


With the FLEX TOASTER you can toast your bread perfectly. Thanks to the bun warmer the appliance can also be used to heat bigger types of bread. The appliance comes with a reheat function, a defrost function, several presets and a memory function to save your own settings. The appliance does not need to preheat, so every time you use the same settings, the result will be the same!

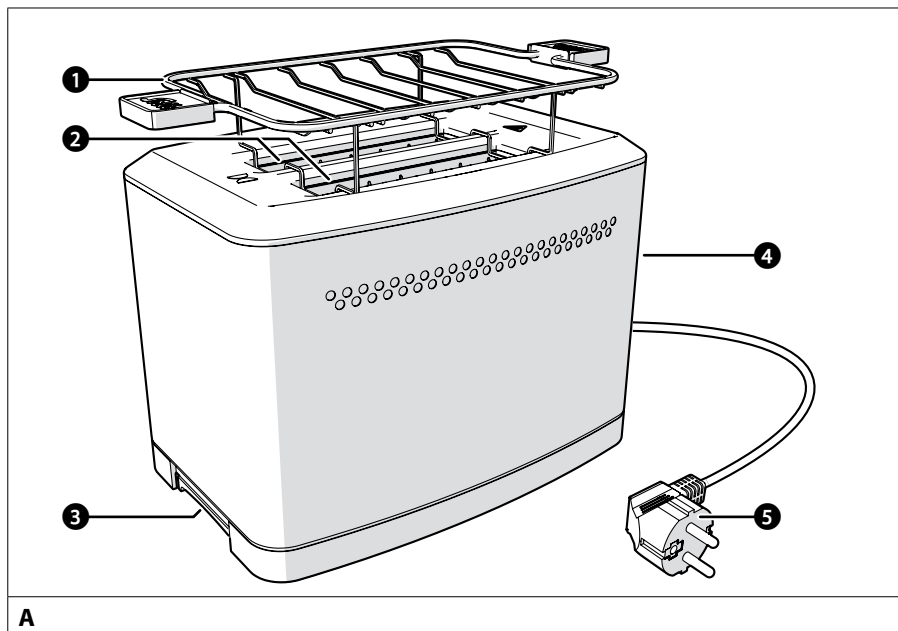

- 1 Bun warmer
- 2 Bread slots
- 3 Crumb tray

- 4 Control buttons
- 5 Power cable

▲ CONTROL BUTTONS

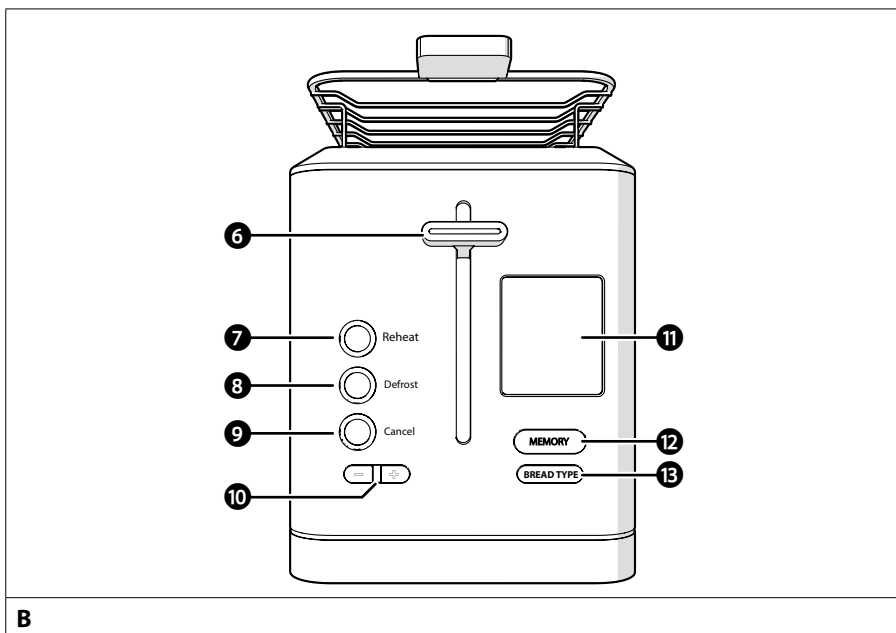

- | | | | |
|---|-------------------|----|-------------------|
| 6 | Activation handle | 10 | Setting buttons |
| 7 | Reheat button | 11 | Display |
| 8 | Defrost button | 12 | Memory button |
| 9 | Cancel button | 13 | Bread type button |

▲ INSTALLATION

To install the appliance:

1. Place the appliance on a stable, flat, and heat and moisture resistant surface.
2. Plug the **power cable** 5 into a power outlet.

The appliance switches on. All icons on the display light up for 2 seconds. The appliance is ready for use.

▲ TOASTING BREAD

To toast bread:

1. Place one slice of bread in each **bread slot** ②.
 - ❗ When you want to heat a bread type that does not fit in the bread slots, install the bun warmer on the bread slots and place the bread on top.
2. Press the **bread type button** ⑬ multiple times to select the desired bread type. The selected bread type is marked with a white right-arrow icon.
 - ❗ You can also use the setting buttons to change the browning degree.
3. Push down the **activation handle** ⑥ to start the toasting process. A timer on the display shows the remaining toasting time. When the timer runs out, the activation handle jumps up.
 - ❗ Press the cancel button to stop the toasting process before the timer runs out.
4. If you need to toast or heat more bread, repeat the steps in this chapter.
5. Switch off and unplug the appliance after use.

▲ USING THE DEFROST FUNCTION

If your bread is still frozen, use the defrost function. To use the defrost function:

1. When setting up the appliance, press the **defrost button** ⑧ to add 25 – 30 seconds to the toasting time for defrosting. The defrost button lights up blue.
 - ❗ When the defrosting function is activated, it stays on when the toasting process is finished.
2. Press the **defrost button** ⑧ again to switch off the defrost function.

▲ USING THE REHEAT FUNCTION

To reheat toast:

1. Press the **reheat button** ⑦ to activate the reheating function. The reheat button lights up blue.
2. Push down the **activation handle** ⑥ to start the toasting process. A timer on the display shows the remaining toasting time. When the timer runs out, the activation handle jumps up.
3. Press the **reheat button** ⑦ again to switch off the reheat function.

▲ USING THE MEMORY FUNCTION

To use the memory function:

1. Press the **memory button** ⑫ to enter the memory function.
2. Press the **memory button** ⑫ multiple times to navigate to the memory slot you want to use. The white box indicates the selected memory slot.
3. Press and hold the **memory button** ⑫ for 3 seconds to select the memory slot. The white box starts blinking.
4. Change the settings of the memory slot:
 - a. Use the **setting buttons** ⑩ to change the toasting time.
 - b. Use the **bread type button** ⑬ to select the desired bread type.
5. Press and hold the **memory button** ⑫ for 2 seconds to save the settings to the memory slot.

The settings are saved to the memory slot. To use the memory slot:

1. Press the **memory button** ⑫ multiple times to select the desired memory slot.
 2. Push down the **activation handle** ⑥ to start the toasting process. A timer on the display shows the remaining toasting time. When the timer runs out, the activation handle jumps up.
- ❗ To reset all memory slots, press and hold the defrost button and the reheat button simultaneously and plug the power cable into a power outlet.

▲ CLEANING AND CARE

We recommend cleaning the appliance after use. To clean the appliance:

1. Switch off and unplug the appliance.
2. Let the appliance cool down.
3. Pull out the **crumb tray** ③.
4. Empty the **crumb tray** ③ in a bin.
5. Place back the **crumb tray** ③.
6. Clean the appliance with a damp cloth.

▲ STORAGE

Store the appliance in the original packaging in a dry and enclosed space.

▲ TECHNICAL SPECIFICATIONS

Model-No.	ST-286DR, Type 8004
Voltage / frequency	220–240 V~ / 50 – 60 Hz
Output	800 - 950 W
Dimensions (W x D x H)	18 x 27 x 19 cm
Weight	1.4 kg (without bun warmer)

Technical changes reserved.

▲ TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not function.	The power connection is not working.	Make sure the power cable is connected to a working power source.
	The appliance is damaged.	Press any button. If the appliance doesn't switch on, the appliance is damaged. Contact Solis or a Solis authorized service center.

DISPOSAL



EU 2012/19/EU

Information for correct disposal of the product in accordance with the European Directive EU 2012/19/EU.

At the end of its working life this equipment must not be disposed of as an household waste. It must be taken to special local community waste collection centres or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

Solis of Switzerland Ltd reserves the right to carry out technical and visual changes and modifications to improve the product at any time.

SOLIS HELPLINE

This item stands out due to its long-life cycle and reliability. Despite this though, if a malfunction ever occurs, simply give us a call. Often a breakdown can be easily and quickly remedied with the right tip or technique without having to straight away send off the device for repair. We will give you all the advice and practical support you require. The contact addresses can be found at the end of this manual.

Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

▲ 2 YEAR GUARANTEE

i Only valid with a till receipt.

We provide a guarantee for this appliance, if the defect has demonstrably arisen as a result of faults in the material or construction, and has arisen despite proper handling and care. Glass breakage is not covered by the guarantee. The guarantee starts from the date of sale, as noted on the sales receipt, which must be enclosed with the appliance. For commercial use, the guarantee lasts for 12 months. The detailed guarantee conditions are available at www.solis.com.

▲ SOLIS CUSTOMER SERVICE

It is always worth calling us before sending in the appliance, as malfunctions can often be easily solved by the appropriate tip or trick from our experts. Please visit us at www.solis.com for countryspecific contact details. Naturally, we would also be pleased to provide you with information over the phone. Please contact us via the following telephone numbers:

For Switzerland:	+41 91 802 90 10
------------------	------------------

For Germany:	0800 724 0702
--------------	---------------

For Austria:	0800 22 03 92
--------------	---------------

For the Netherlands:	+31 85 4010 722
----------------------	-----------------

For Belgium:	+32 2 808 35 82
--------------	-----------------

For the other countries:	+41 44 874 64 84
--------------------------	------------------

CH**Schweiz / Suisse / Svizzera**

✉ Solis Produzione SA
Centro Solis
Via Penate 4
CH – 6850 Mendrisio

Adresse für Warenretouren abweichend – siehe:

Adresse différente pour les retours de produit – voir:

Indirizzo differente per resi di merce - vedi:

www.solis.com

☎ 091 – 802 90 10
@ support.ch@solis.com
🌐 www.solis.ch

D**Deutschland**

✉ Solis Deutschland GmbH
Marienstrasse 10
D – 78054 Villingen-
Schwenningen

Adresse für Warenretouren abweichend – siehe:

www.solis.com

☎ 0800 – 724 07 02
@ info.de@solis.com
🌐 www.solis.de

AT**Österreich**

✉ Solis Austria
Bruderhofstrasse 10
A – 6800 Feldkirch

Adresse für Warenretouren abweichend – siehe:

www.solis.com

☎ 0800 – 22 03 92
@ info.at@solis.com
🌐 www.solis.at

NL**Nederland**

✉ Solis Benelux BV
Stadskade 318
NL – 7311 XX Apeldoorn

Afwijkend adres voor productretouren – zie:

www.solis.com

☎ 085 – 4010 722
@ info.nl@solis.com
🌐 www.solisonline.nl

B LU**België / Belgique
Belgien / Luxembourg**

✉ Solis Benelux BV
Stadskade 318
NL – 7311 XX Apeldoorn

Address for return shipment of goods differs – please refer to:

Afwijkend adres voor productretouren – zie:

Adresse différente pour les retours de produit – voir:

www.solis.com

☎ +32 – (0)2 – 808 35 82
@ info.be@solis.com
🌐 www.solis.be

INT**International**

✉ Solis Produzione SA
Centro Solis
Via Penate 4
CH – 6850 Mendrisio
Switzerland

Address for return shipment of goods differs – please

refer to www.solis.com

☎ +41 – 91 – 802 90 10
@ support.ch@solis.com
🌐 www.solis.com

SINCE 1908

Solis

Solis of Switzerland Ltd

Solis-House • CH-8152 Glattbrugg-Zurich • Switzerland
www.solis.ch • www.solis.com

Please visit us at

www.solis.com