


Diana DL




- | | |
|----------------------------------|---------------------------------------|
| D Montageanleitung | GB Assembly instructions |
| FR Notice de montage | NL Handleiding voor de montage |
| CZ Montážní návod | IT Istruzioni di montaggio |
| RO Instrucțiuni de montaj | RU инструкция по сборке |
| PL Instrukcja montażu | SK Návod na montáž |
| HU Szerelési útmutató | TR Montaj talimatı |

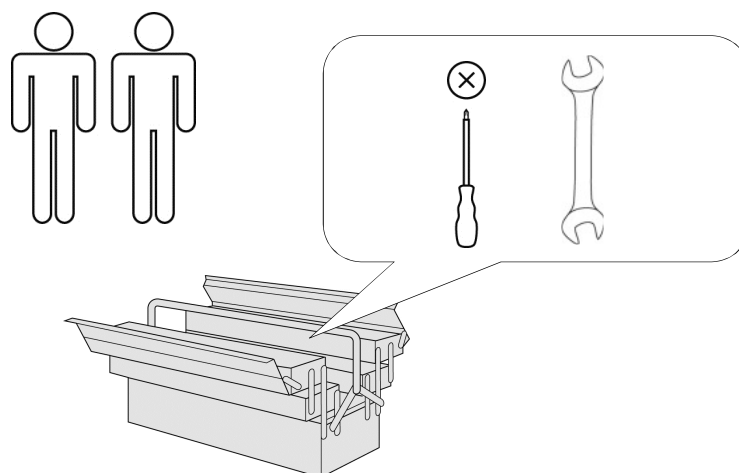

 


0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200

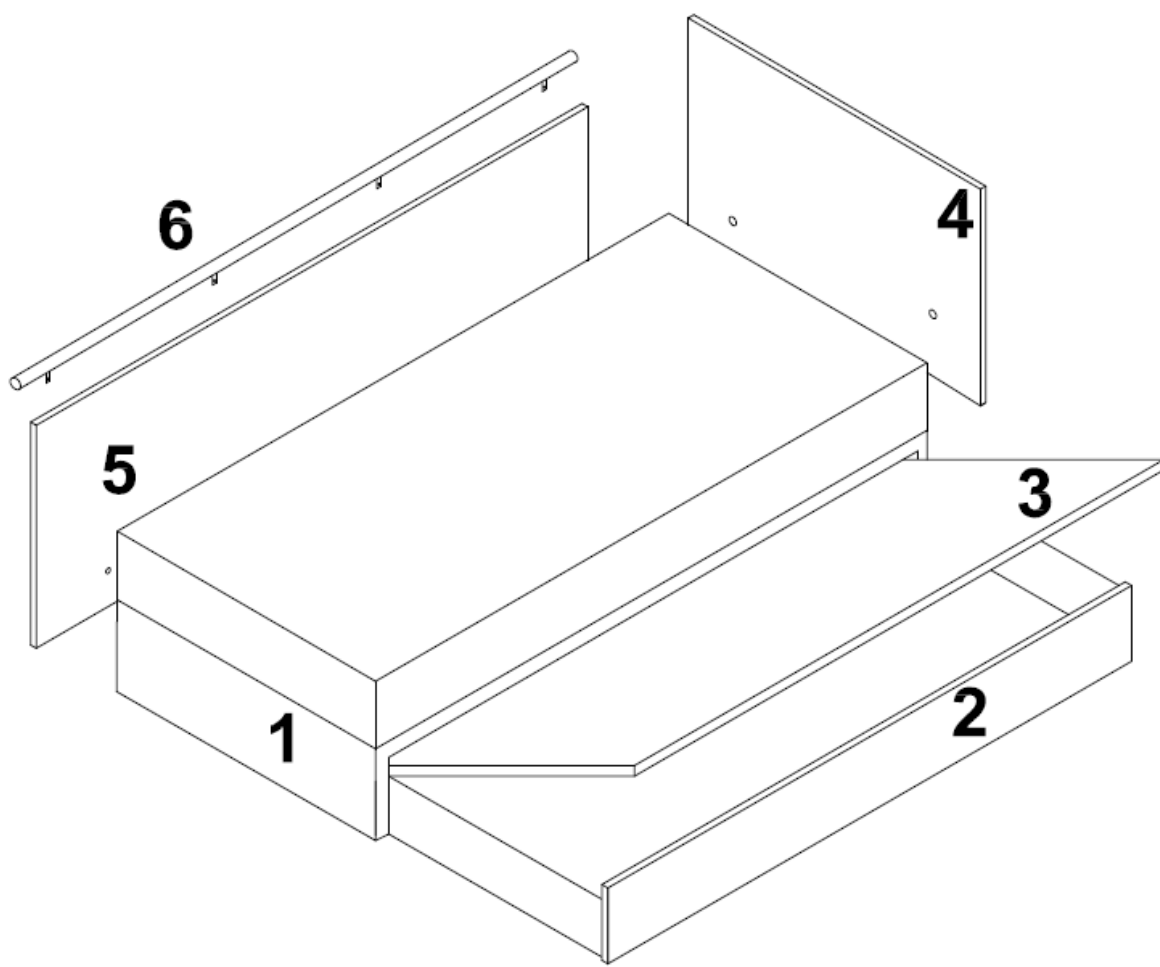
Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба	
Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	Diana
Nr. • No. • N° • Номер • Č • Sz	SH42/SH55
Typ • Type • Tip • Típus • Tipo Тип	DL



A	B	C	D	E	F
2x 6x50	5x M8	2x M6	3x 6x45	3x 3,5x16	1x

 



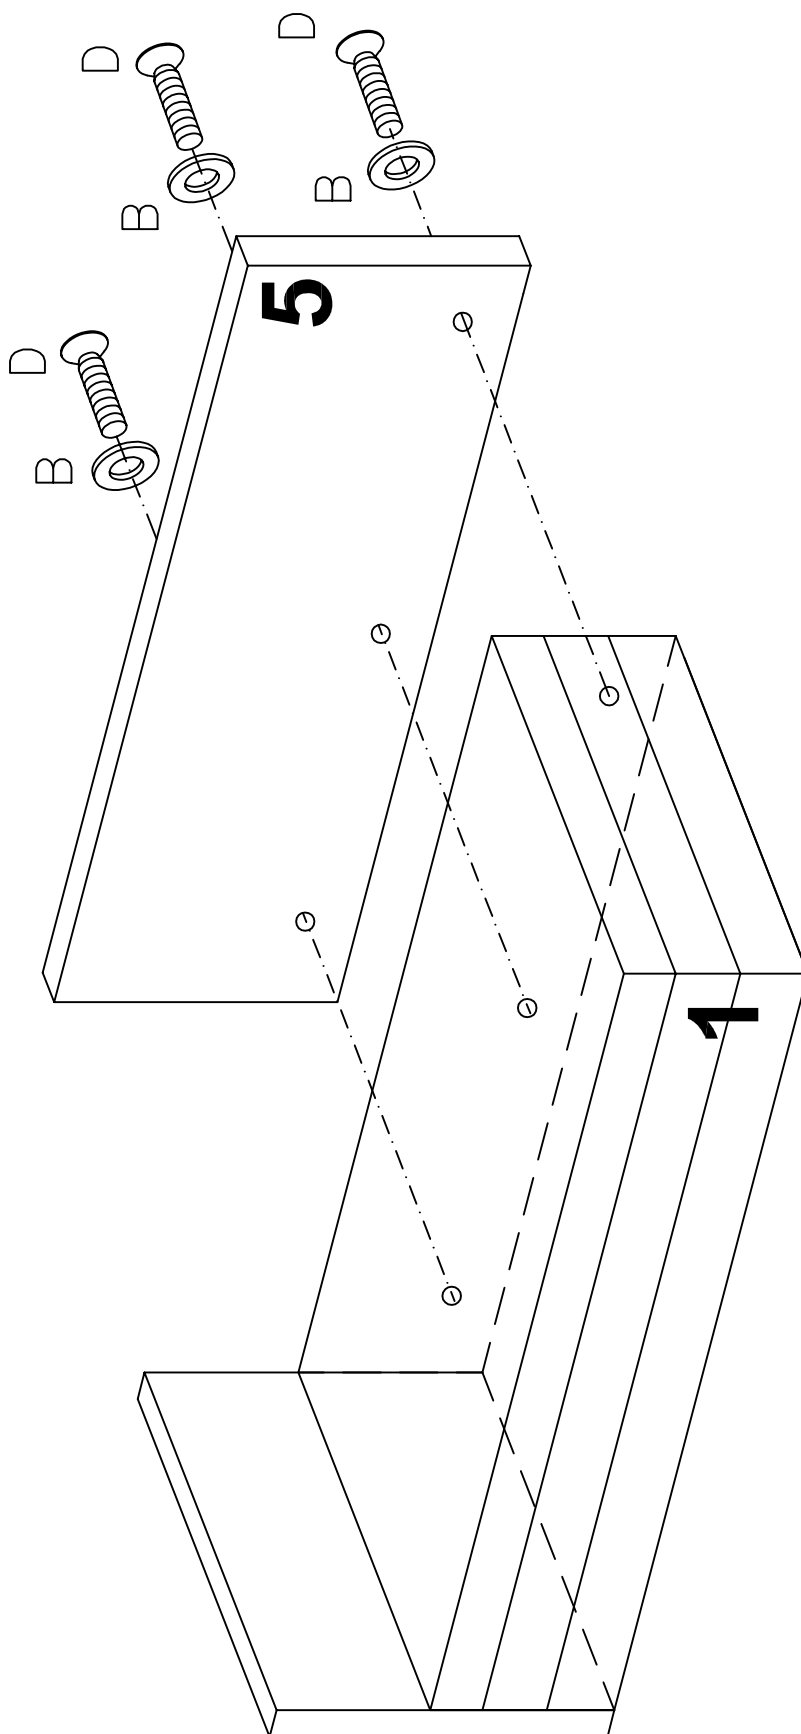
A	B	C
		
2x 6x50	2x M8	2x M6

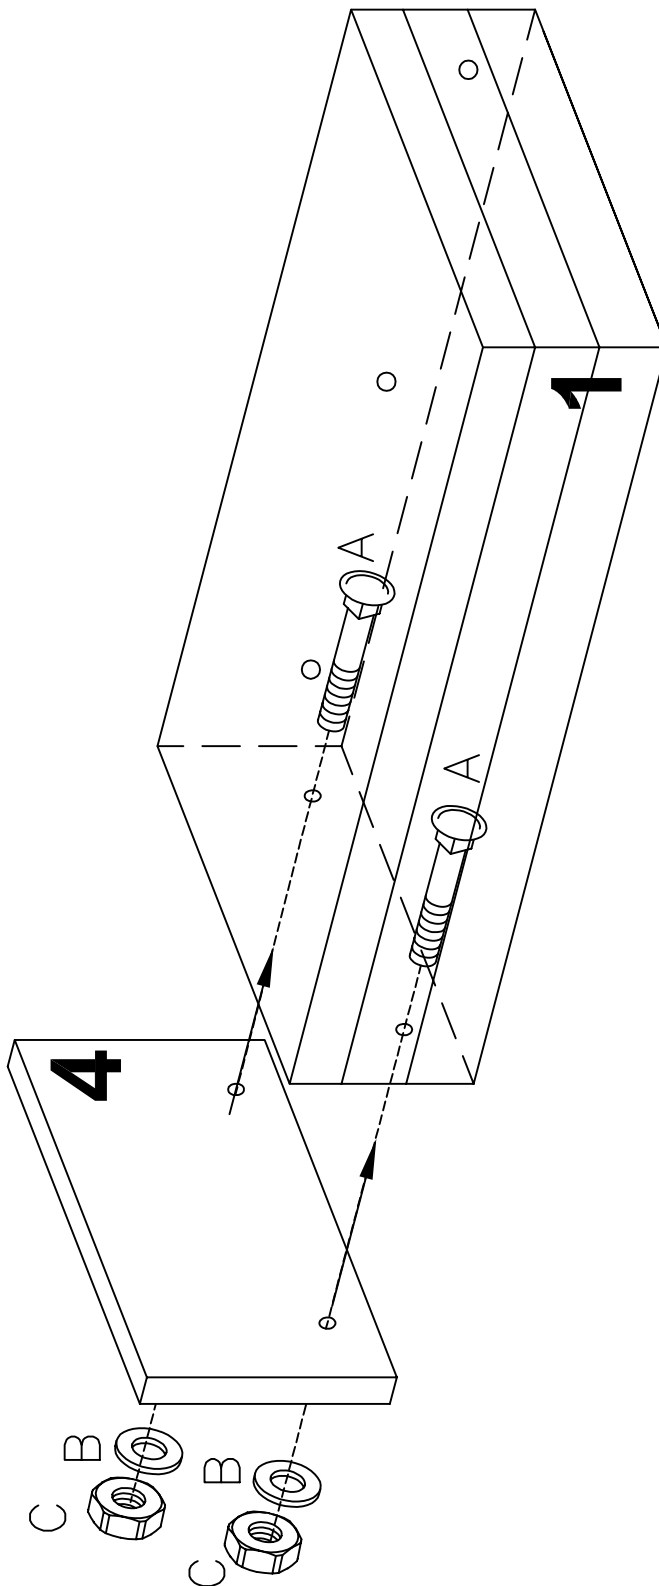

DL_KT_2xSchloss_6x50

 
 
2.


D	B	
		
3x 6x45	3x M8	



DL_RÜ_3xSenk_6x45



E		3x 3,5x16
F		1x

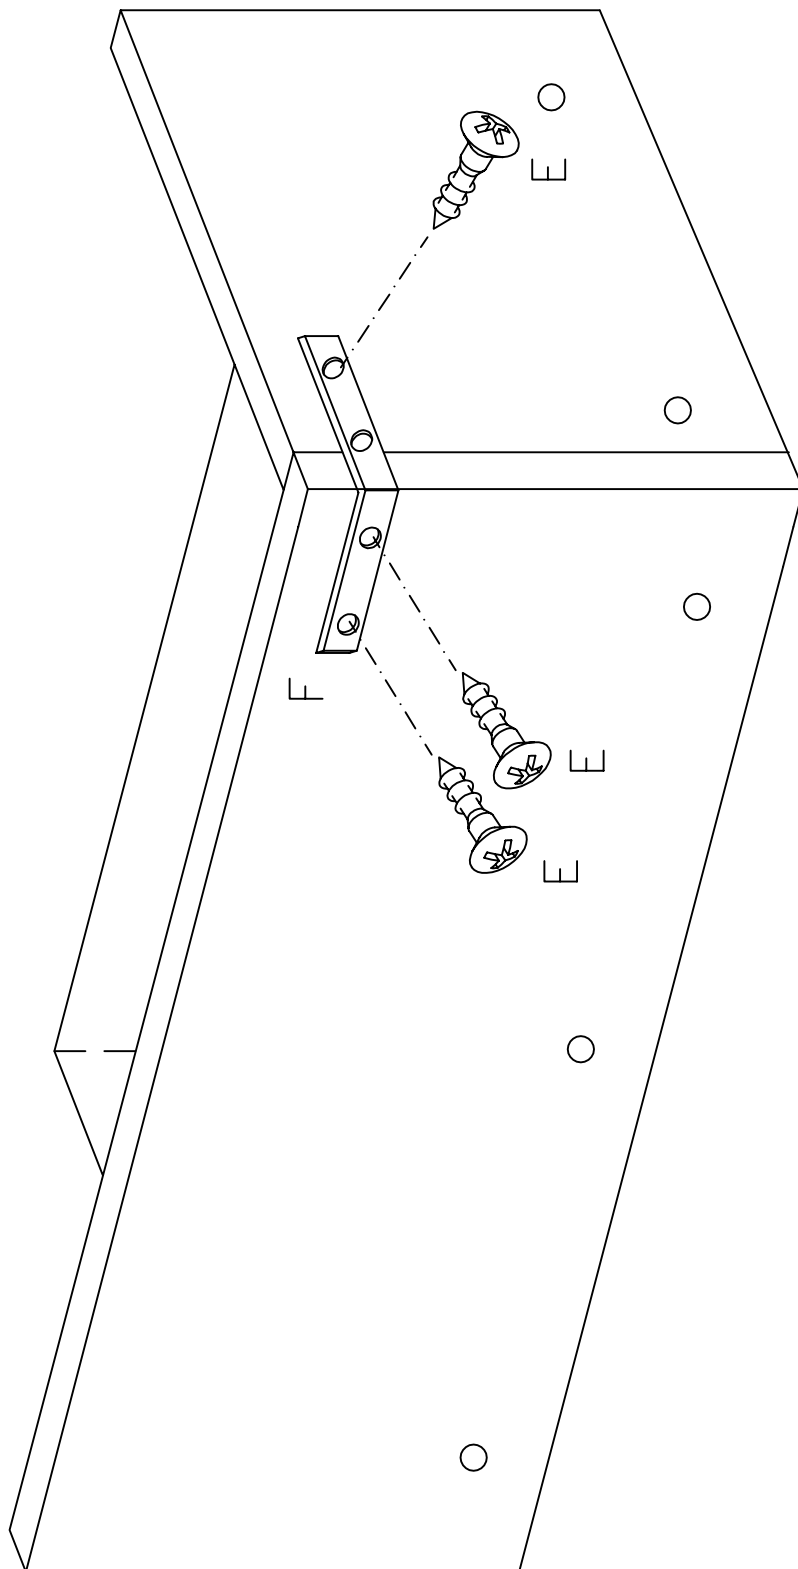

DL_SCHL_WI