



**D** Montageanleitung

**GB** Assembly instructions

**FR** Notice de montage

**NL** Handleiding voor de montage

**CZ** Montážní návod

**IT** Istruzioni di montaggio

**RO** Instrucțiuni de montaj

 
 
**RU** инструкция по сборке

**PL** Instrukcja montażu

**SK** Návod na montáž

 
**HU** Szerelési útmutató

**TR** Montaj talimati

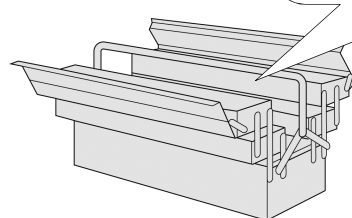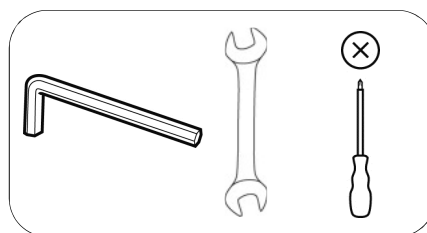

0  
10  
20  
30  
40  
50  
60  
70  
80  
90  
100  
110  
120  
130  
140  
150  
160  
170  
180  
190  
200

 
<b>Service • Assistenza • Dienstverlening • Serwis</b> <b>Servis • Szerviz • Сервисная служба</b>	
Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	<b>Joshua DB</b>
Nr. • No. • N° • Номер • Č • Sz	<b>SH45</b>
Typ • Type • Tip • Típus • Тіро Тип	<b>BK zerl. OHNE</b>

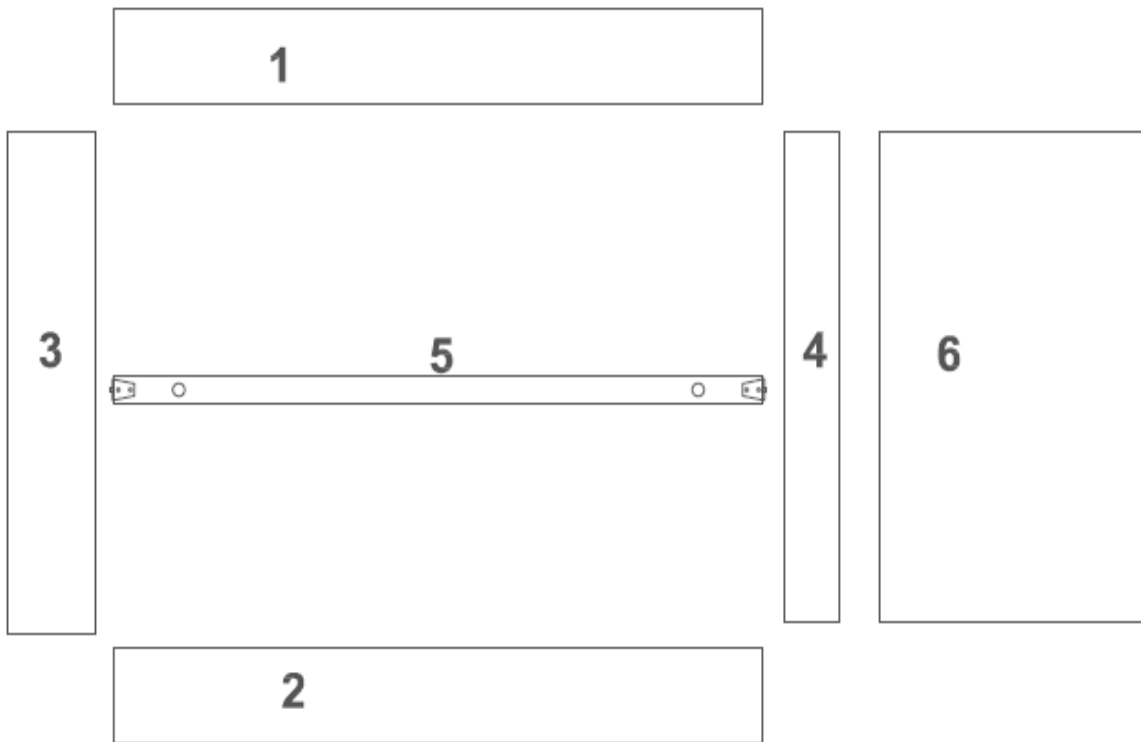

A	B	C	D	E	F	G	H	I	J	K	L	M
2x	6x	24x 3,5x20	4x	16x 6x25	4x	2X	2X 8X16	2x 8x20	2x M8	4x 8x60	4x 8x30	4x M8


 
 
0  
10  
20  
30  
40  
50  
60  
70  
80  
90  
100  
110  
120  
130  
140  
150  
160  
170  
180  
190  
200

 
<b>Service • Assistenza • Dienstverlening • Serwis</b> <b>Servis • Szerviz • Сервисная служба</b>	
Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denimire • İsim • Название	<b>Joshua DB</b>
Nr. • No. • N° • Номер • Č • Sz	<b>SH45</b>
Typ • Type • Tip • Típus • Тіро Тип	<b>BK zerl. LARO</b>

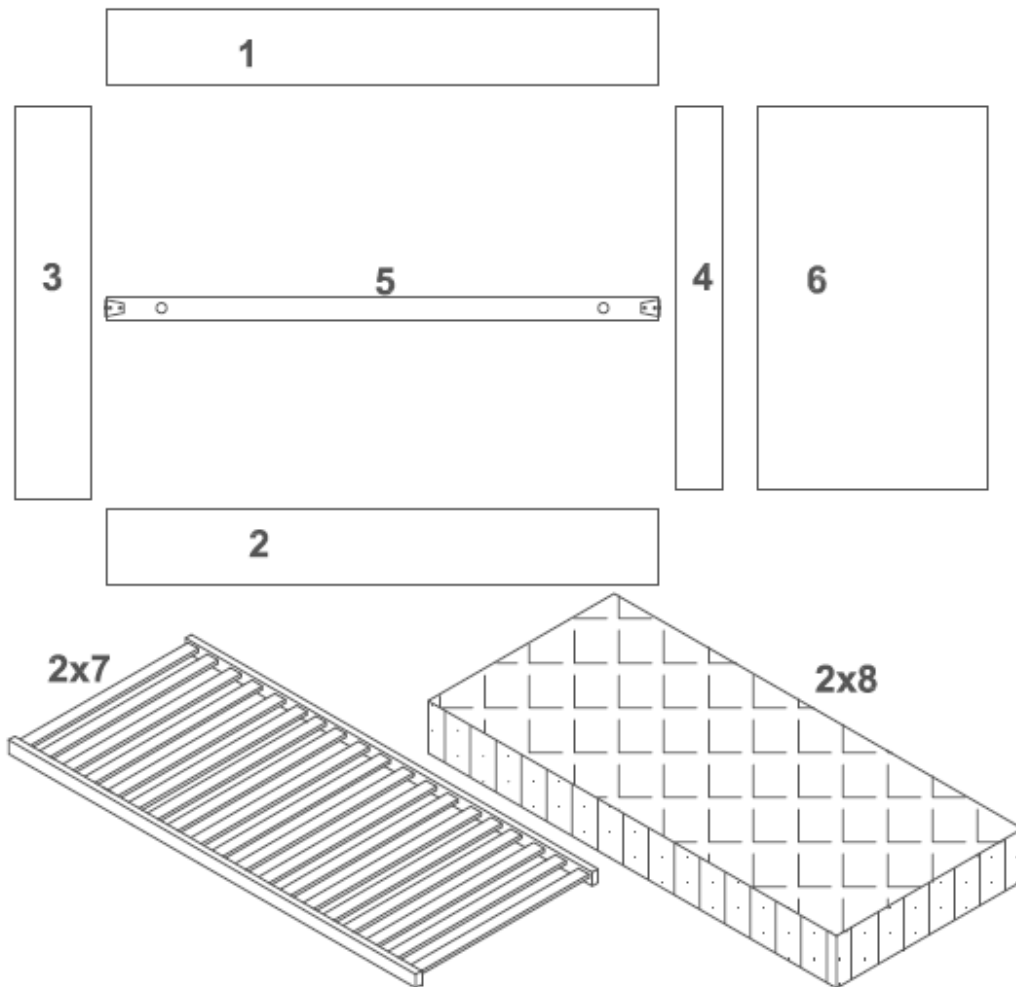

A	B	C	D	E	F	G	H	I	J	K	L	M
2x	6x	24x 3,5x20	4x	16x 6x25	4x	2X	2X 8X16	2x 8x20	2x M8	4x 8x60	4x 8x30	4x M8


 
 


 
 
A	B	C
		
2x	6x	24x 3,5x20

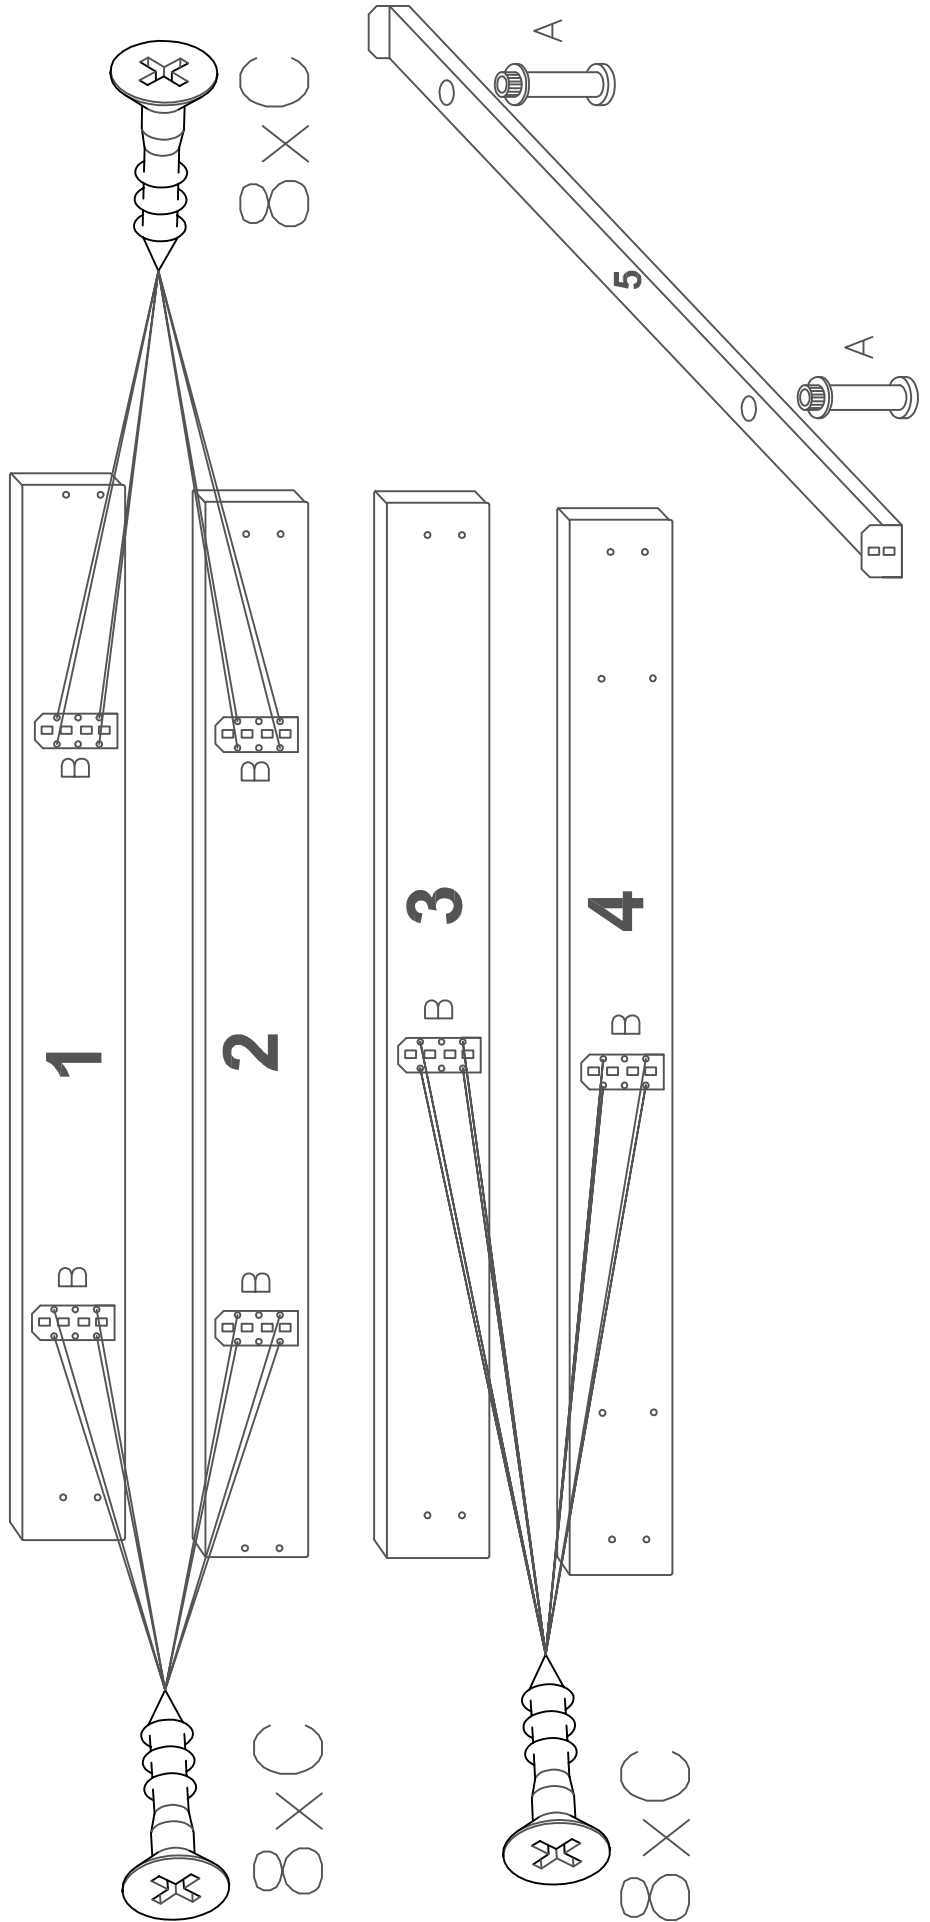

 
 

 
BKU-4S-4x-ALP-ML-LS-QFT-QKT

 
 


 
D		4x
E		16x 6x25
F		4x

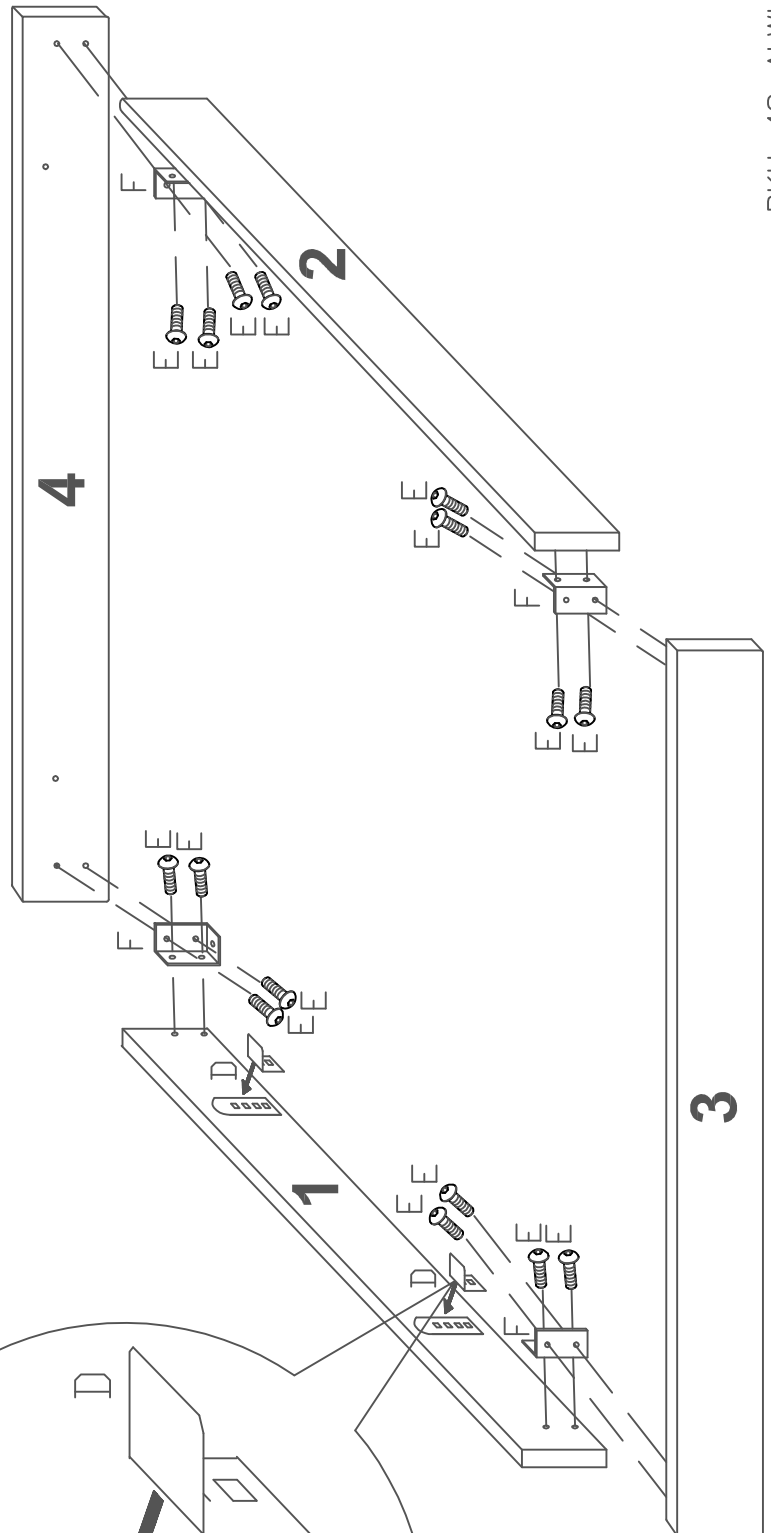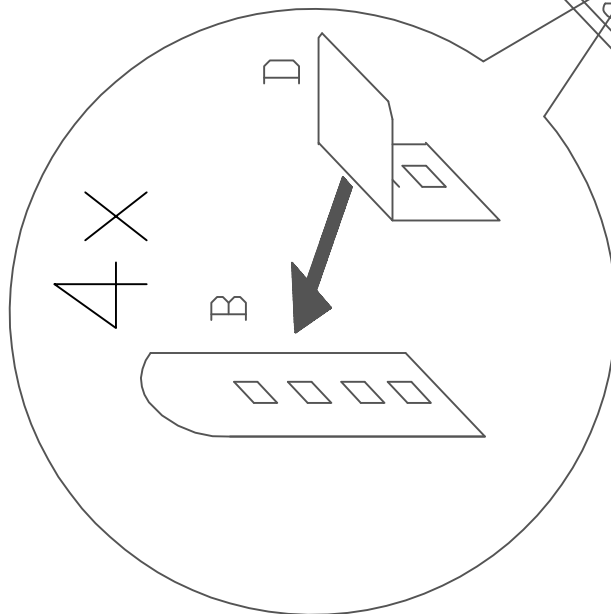




3.

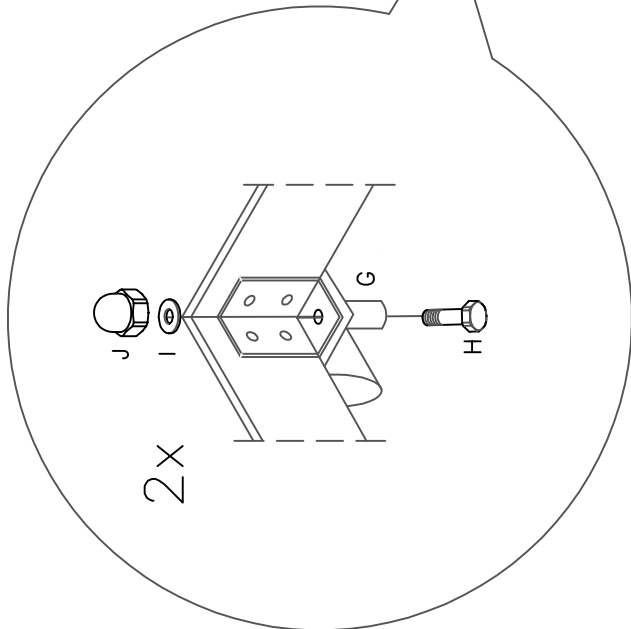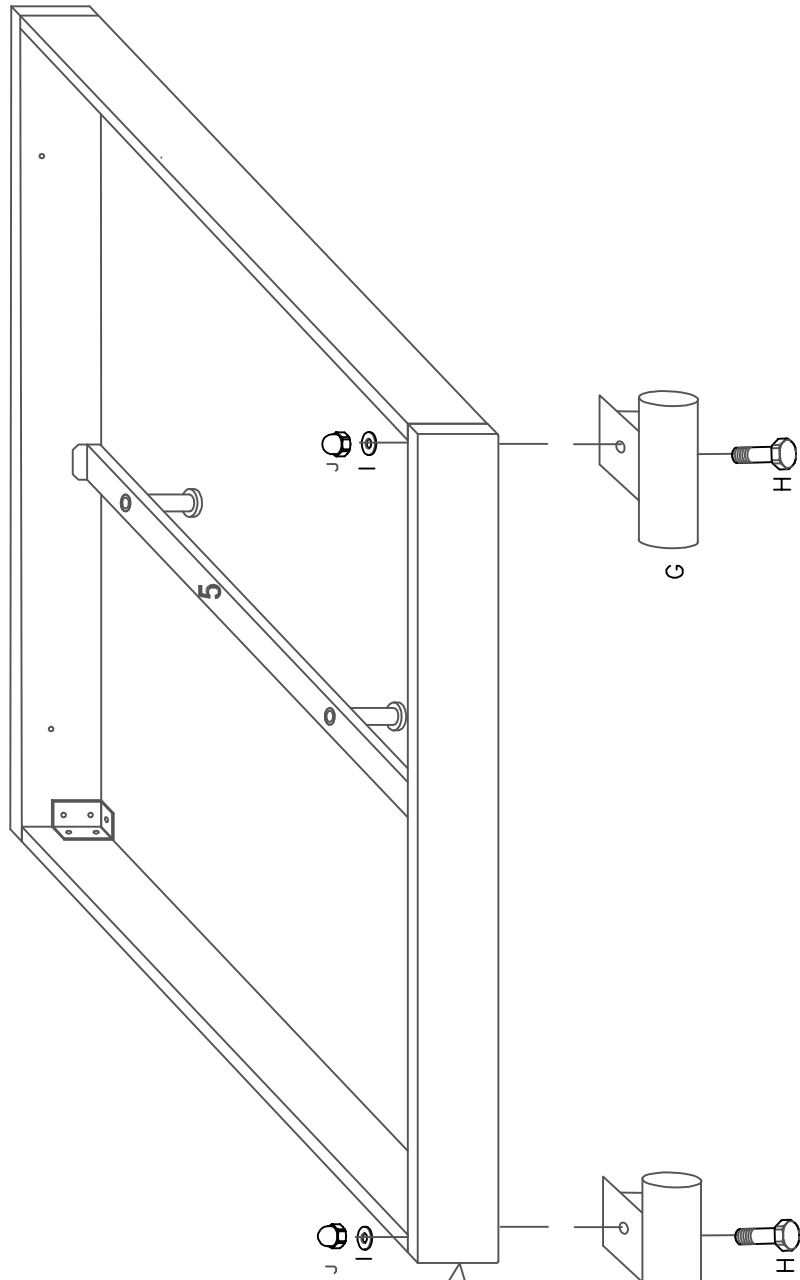G		2X
H		2X 8X16
I		2x 8x20
J		2x M8

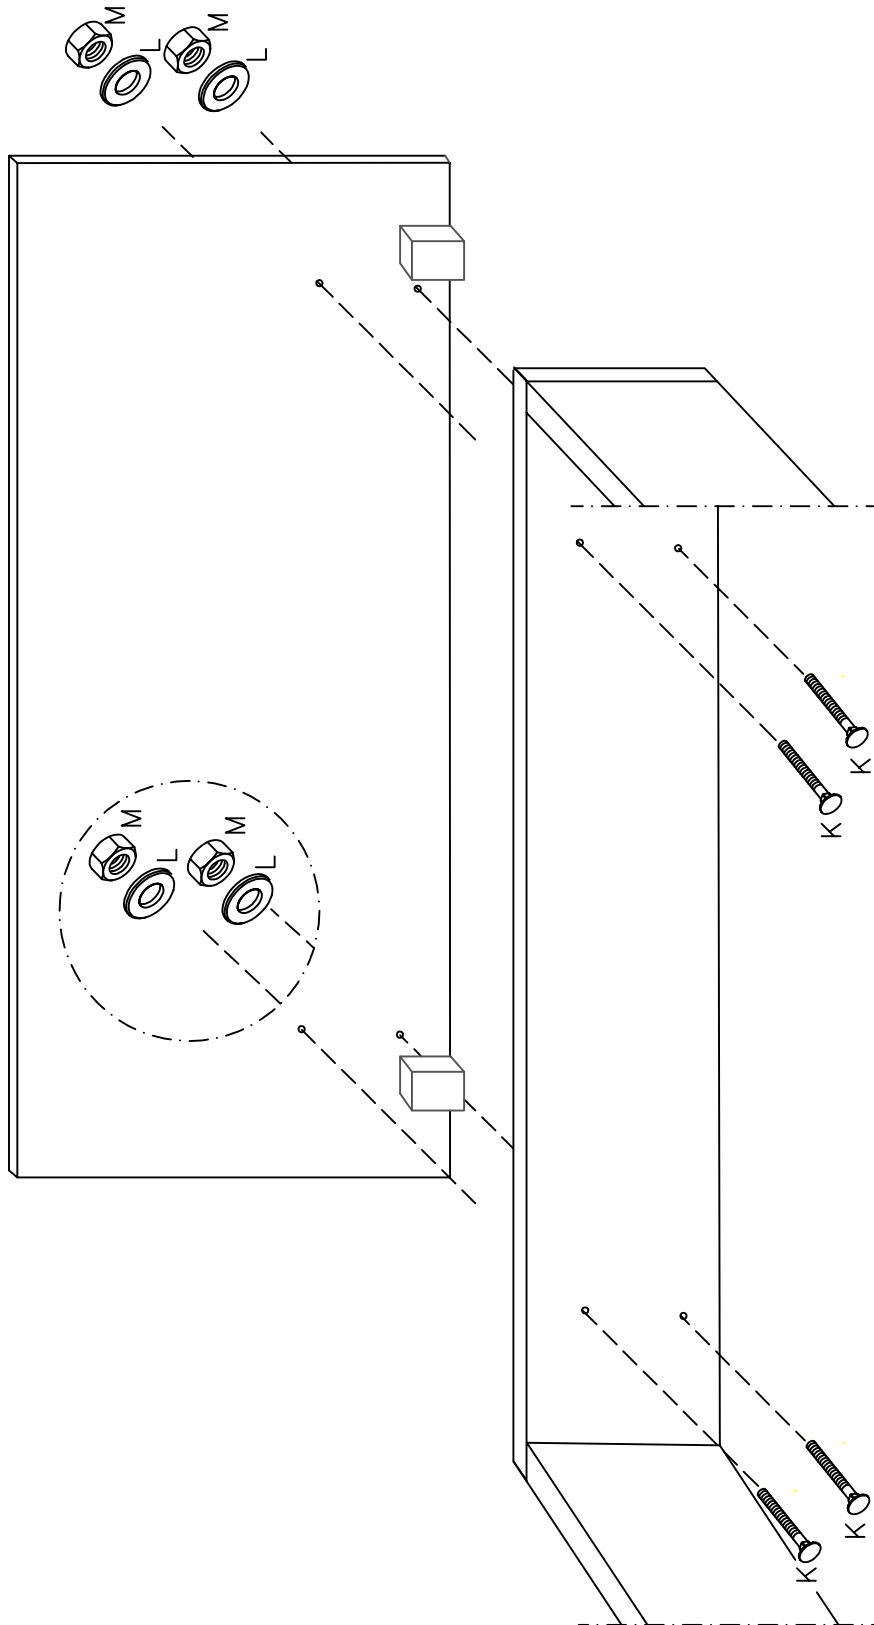



M		4x M8
L		4x 8x30
K		4x 8x60