

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromážďovací instrukce



I Istruzioni per il montaggio

F Instructions de montage

RU Инструкция по монтажу


H Gennyesevés utasítások

Polsterbett-Gestoffteerde bed-Tapicerowane łóżko-Tapitate pat-Uphoistered bed-Мягкая кровать-yatak kapitone-Letto imbottito-Lit rembourré
Čalunené posteľ čalunené posteľ kárpitovaný ágy

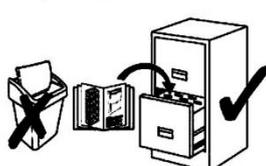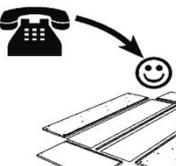


Imperial Modelle mit Topper

90 cm, 100 cm, 120cm

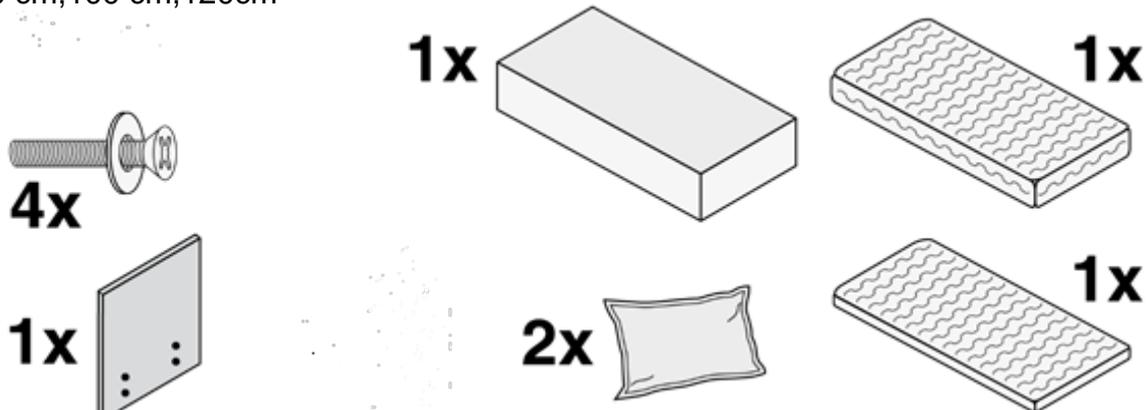


Schrauben sind in der Kopfteilverpackung enthalten

140 cm




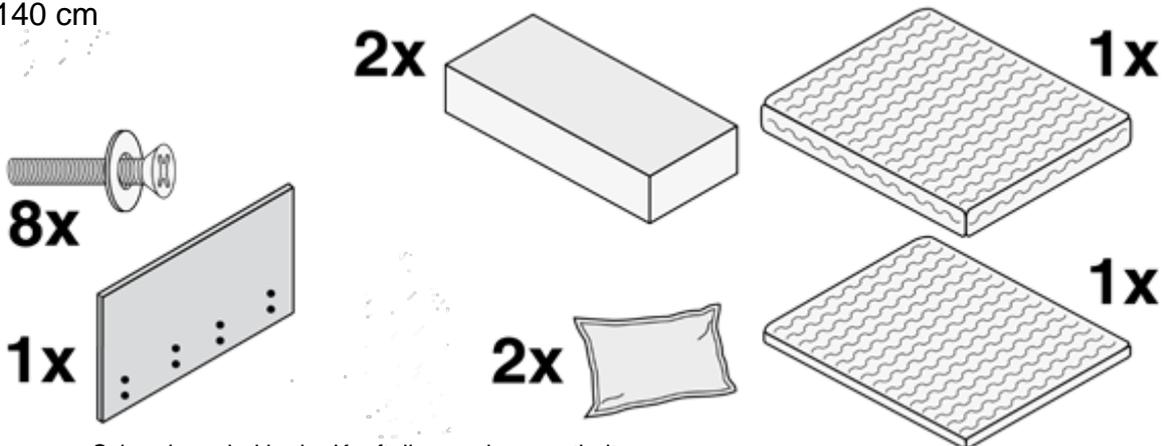


Schrauben sind in der Kopfteilverpackung enthalten

160 cm, 180 cm, 200 cm

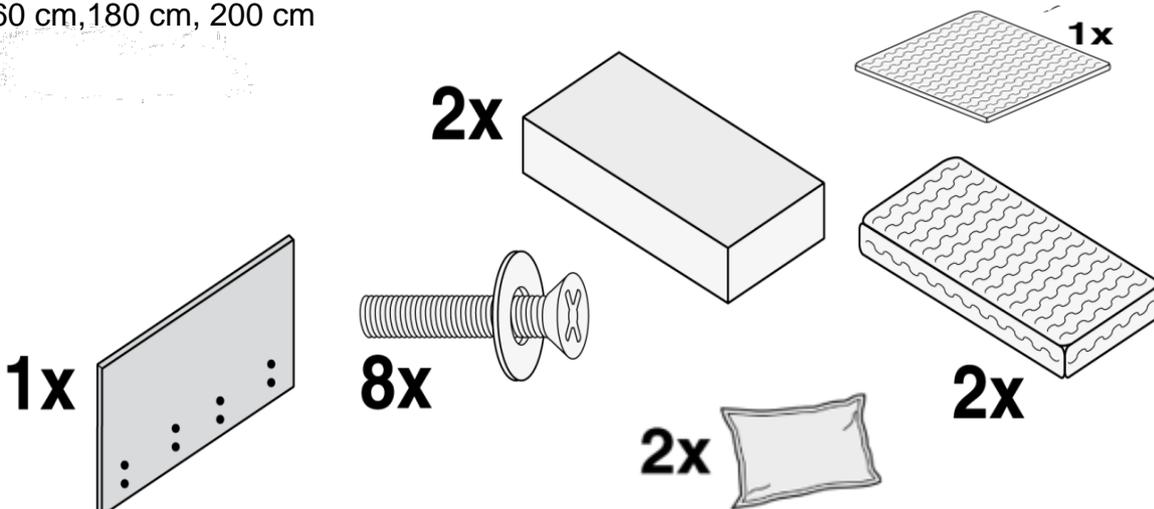

Schrauben sind in der Kopfteilverpackung enthalten

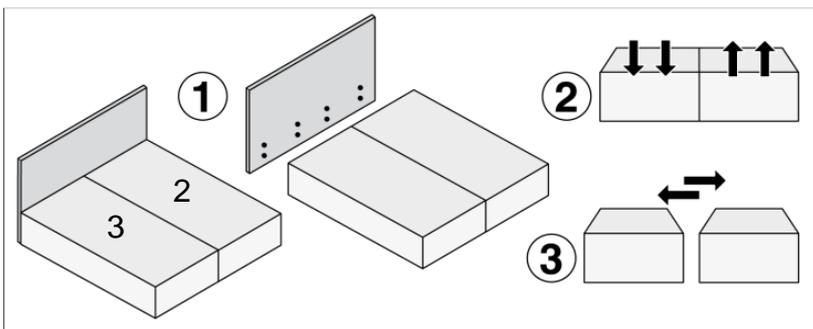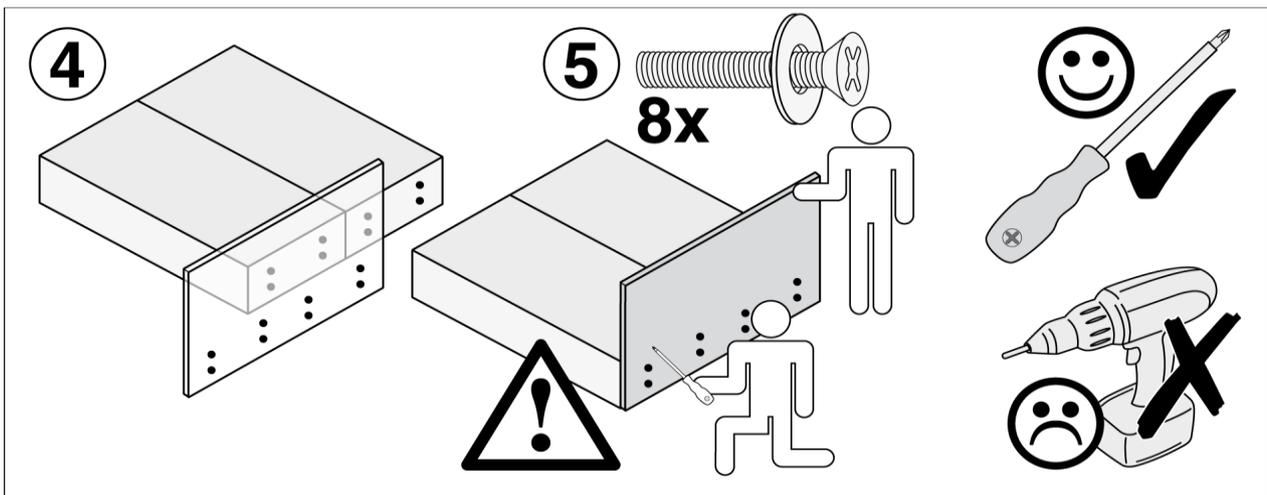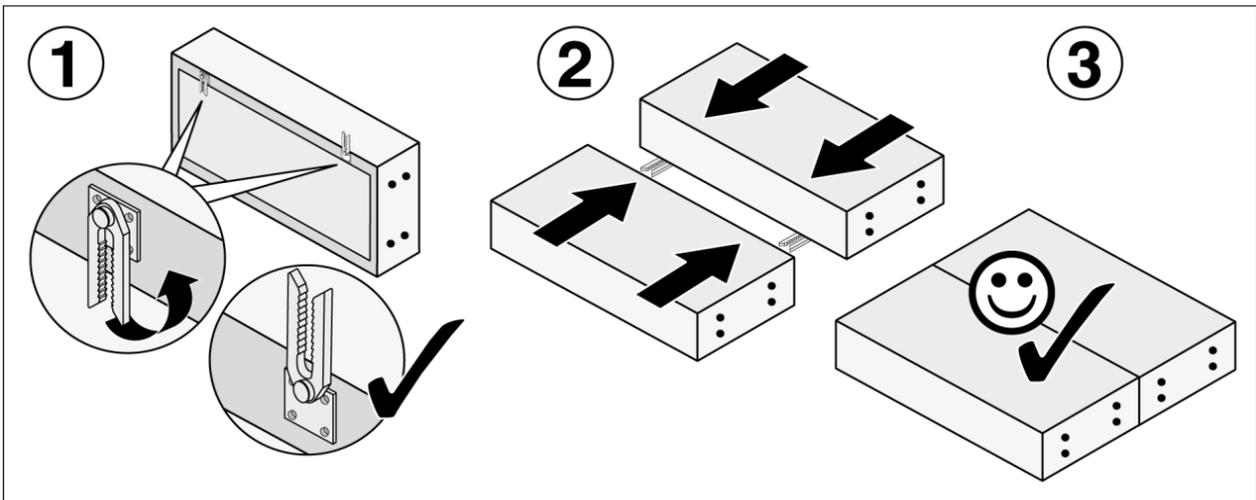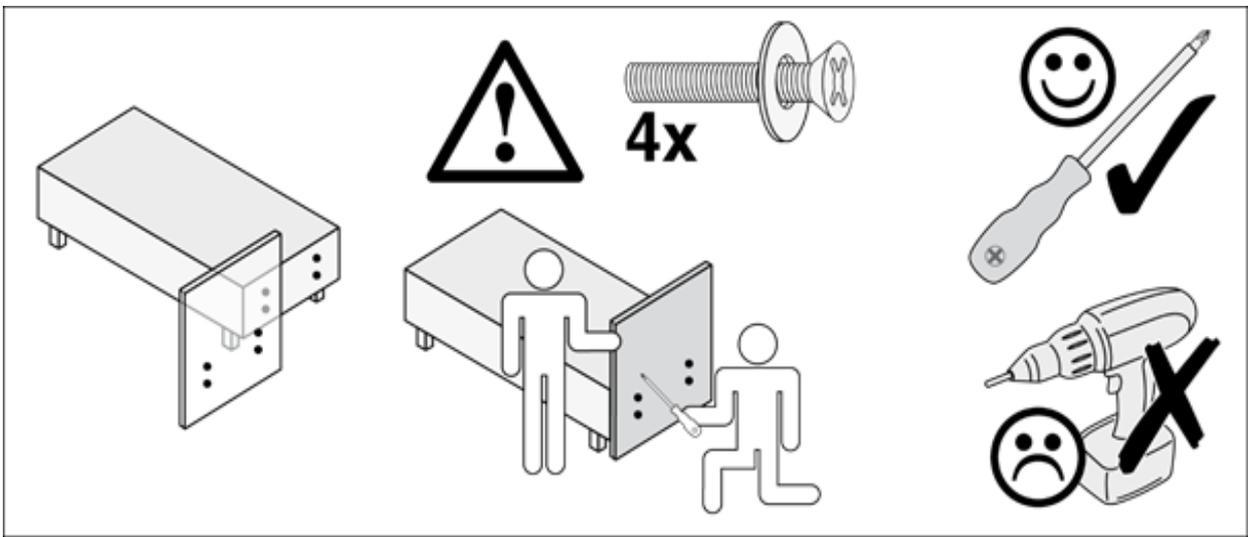

WESTFALIA
Polsterbetten

Made in Germany

Elastoflex GmbH
Löhner Straße 123
32584 Löhne/Germany