



(D) Videounterstützte
Montageanleitung

(TR) Video destekli kurulum
talimatları

(RU) инструкция по
монтажу с помощью
видеосигнала

(RO) Instrucțiuni de instalare
acceptate video

(GB) Video-assisted
assembly instructions

(IT) Istruzioni di montaggio
video-assistite

(CZ) Instalační pokyny
podporované videom



(PL) Instrukcje montażu
wspomagane sygnałem
wizyjnym

(FR) Instructions de montage
assistées par vidéo

(NL) Video-ondersteunde
montage-instructies

(HU) Video-támogatott
telepítési utasítások







(SK) Inštalčné pokyny
podporované videom

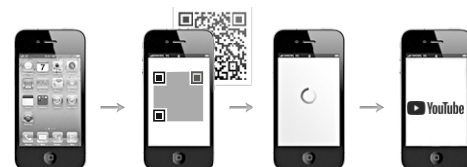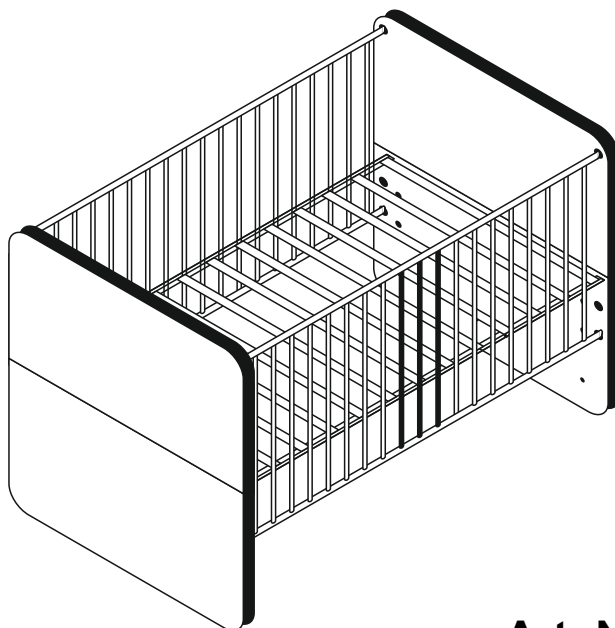

Art.-Nr.: **0469_BH P1**
Babybett

REPC-Nr.:



**Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба**

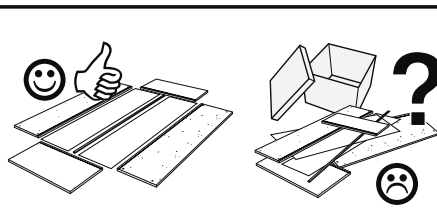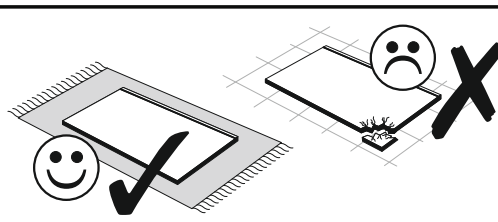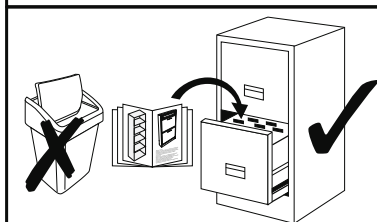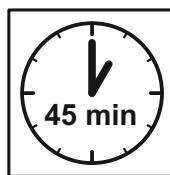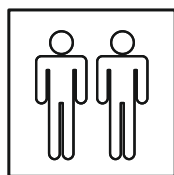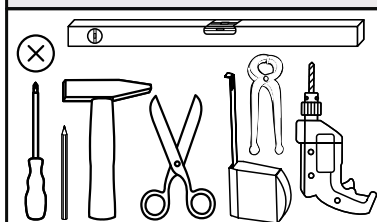

SCAN ME


Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

Beutel 0469_BH-P1 0-11 Colli 1/2


B01-239 1x	 SW 3	B02-109 8x	 10x70	B05-60 8x	 Ø10	B10-90 12x	
B10-95 4x		B10-100 8x	 M6x8	B10-105 8x	 M6x10	B10-110 8x	
B10-80 2x		B10-85 2x		B10-115 12x	 M 6	B05-273 1x	



SCAN ME



Colli 1/2

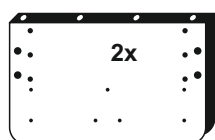

778 x 482


Bettendekopf unten




778 x 446

Bettendekopf oben


Colli 2/2

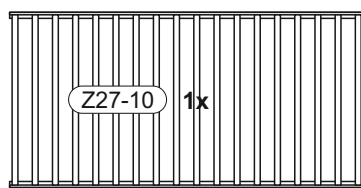


1388 x 680

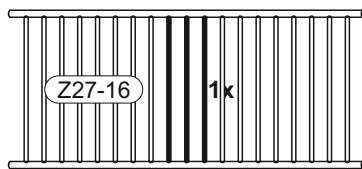


1388 x 642




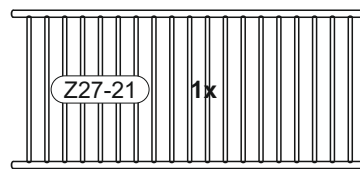


1388 x 642



Die Beschläge müssen bündig in die Platten eingeschlagen werden.

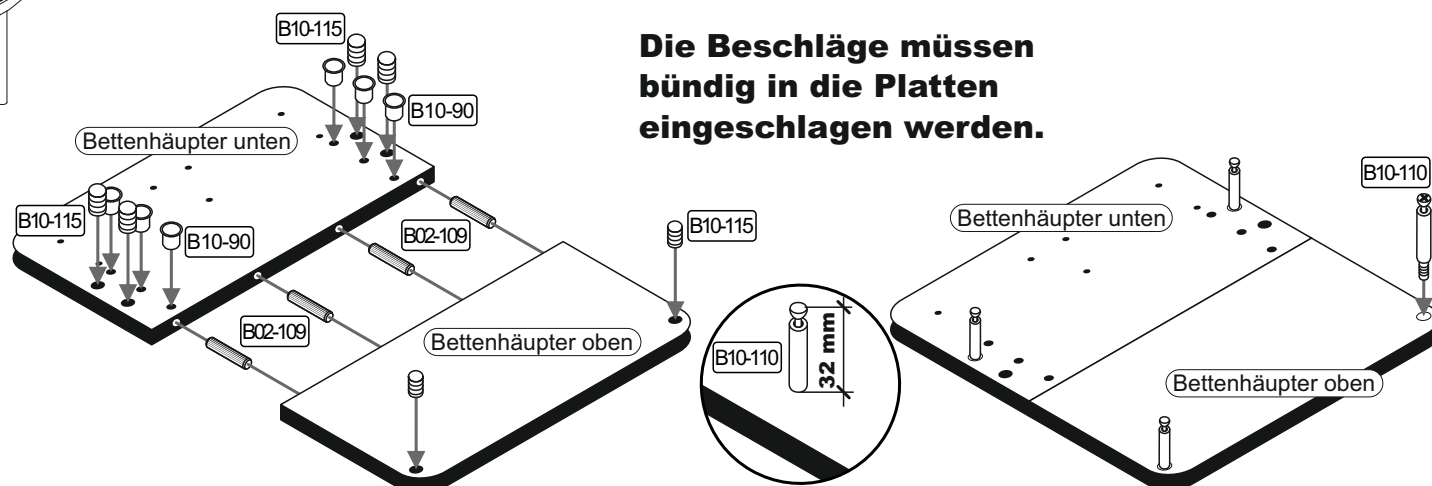

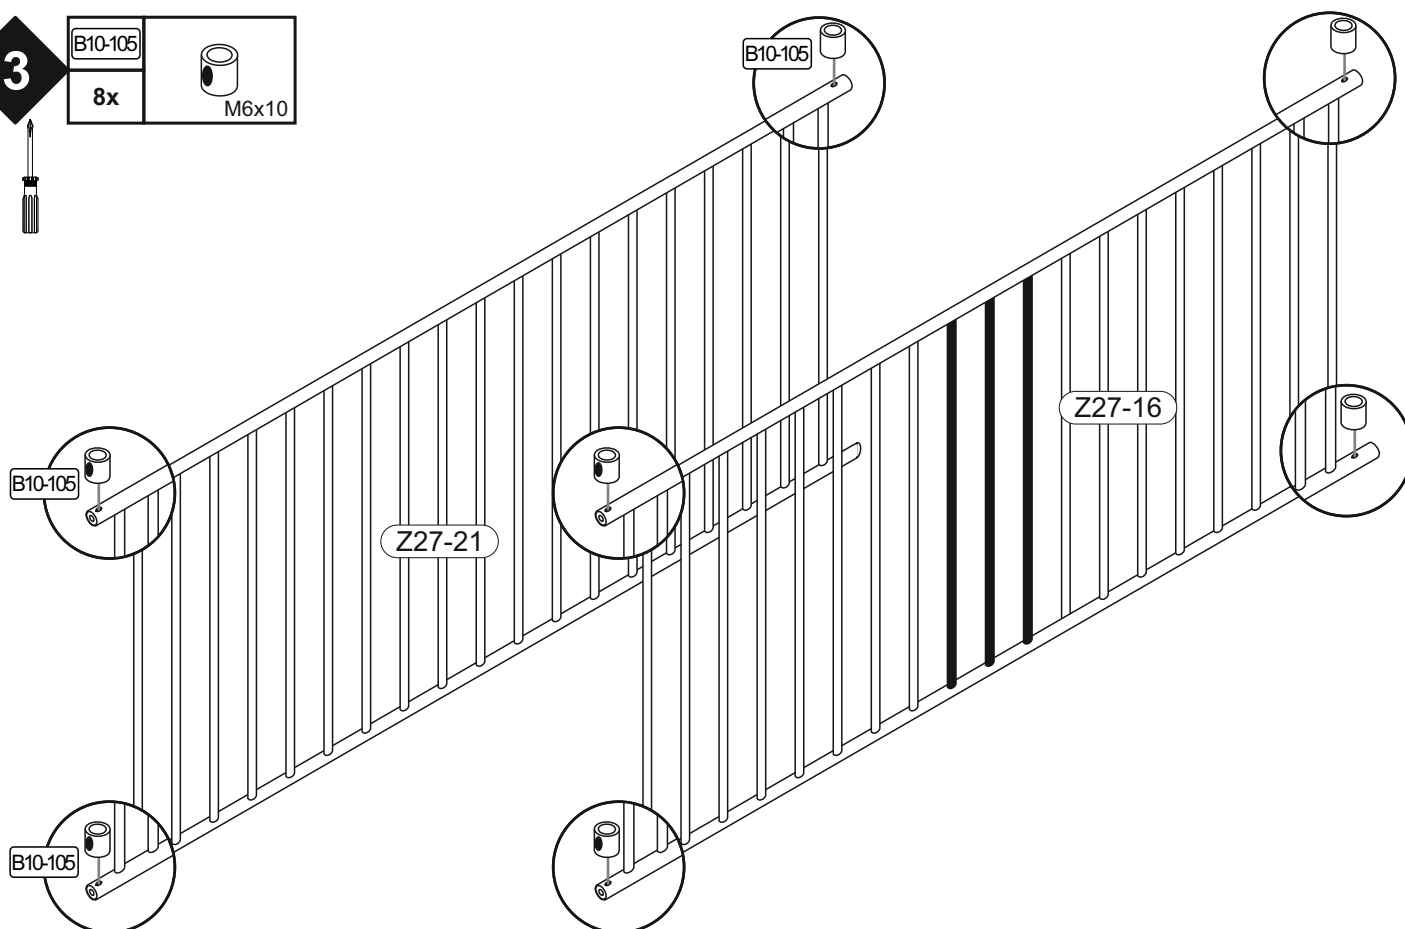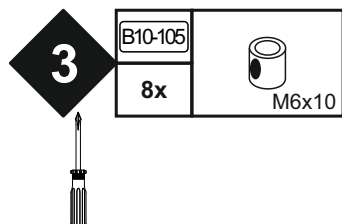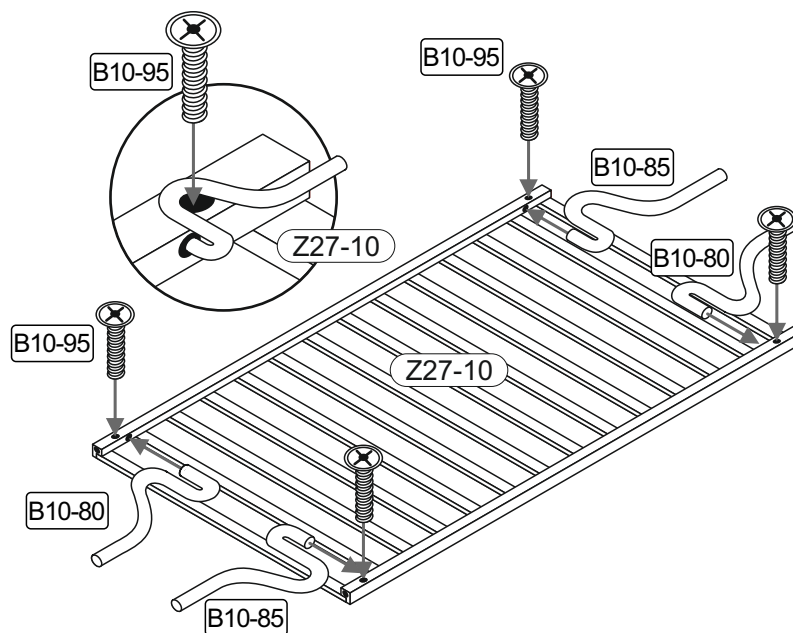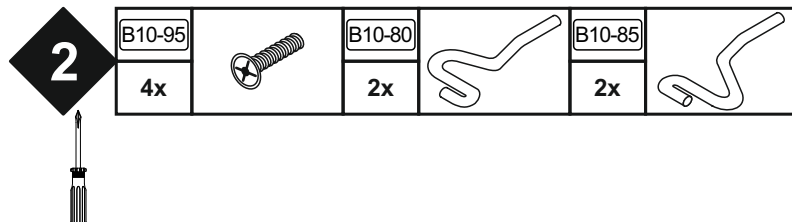

4

B01-239		B10-100		B05-273	
1x	SW 3	8x	M6x8	1x	

**Das Bett nicht kippen
sondern beidseitig
anheben**

