

Novel



D Montageanleitung

GB Assembly instructions

FR Notice de montage

NL Handleiding voor de montage

CZ Montážní návod

IT Istruzioni di montaggio

RO Instrucțiuni de montaj





RU инструкция по сборке

PL Instrukcja montażu

SK Návod na montáž

HU Szerelési útmutató

TR Montaj talimati

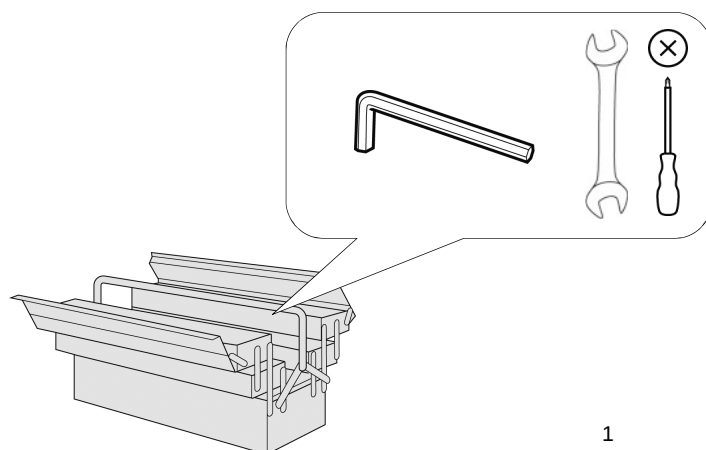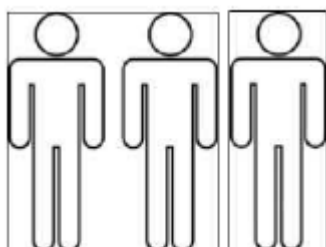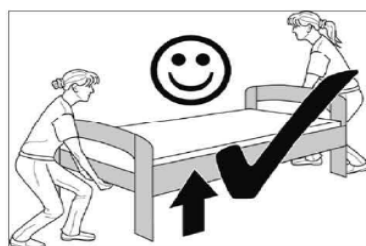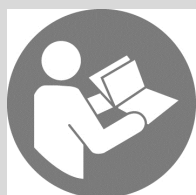

Service • Assistenza • Dienstverlening • Serwis

Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam
Nazwa • Jméno • Názov • Név
Denumire • İsim • Название



Novel zerl.

Nr. • No. • N° • Номер • Č • Sz

SH42

Typ • Type • Tip • Típus • Tipo
Тип

OHNE

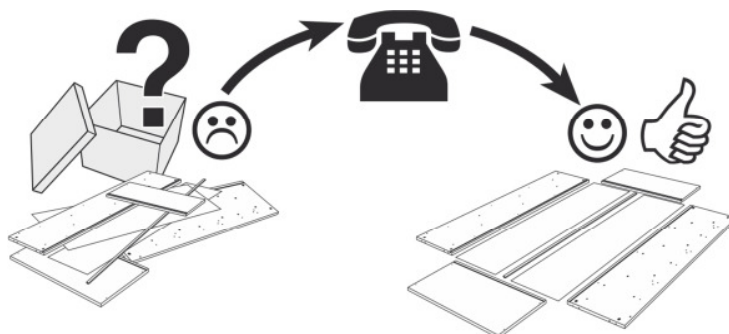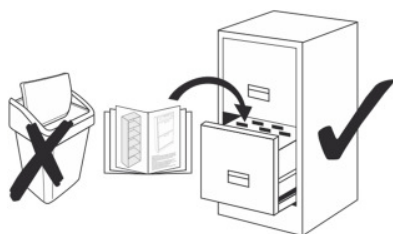


7




1




3




5

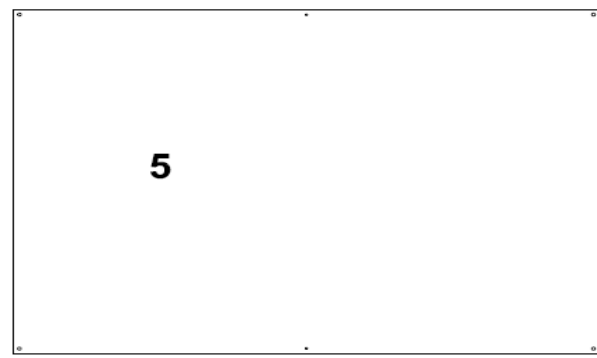

4



6

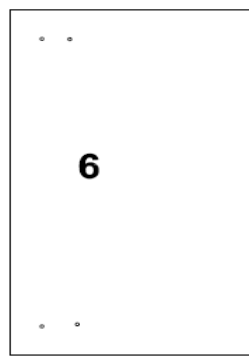

2




8




Fu2	A	B	C	D	G	H	I	J	K	L
4x	16x 6x20	2x 8x50	2x M8	2x M8	4x 6x30	4x M6	2x 5x16	2x M5	2x 4,5x16	10x 6x40

1.

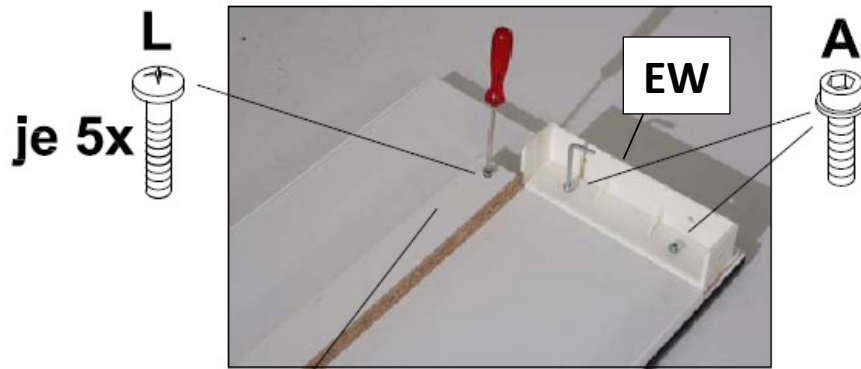

EW
 Handfest anziehen
 Ne serrez pas
 Nedotahujte
 Nu strângeți
 Nie dokrećać
 Ne húzza meg
 Do not tighten
 Nog niet vastdraaien
 Non serrare
 Не затягивайте
 Nedotahujte
 Sıkmayın

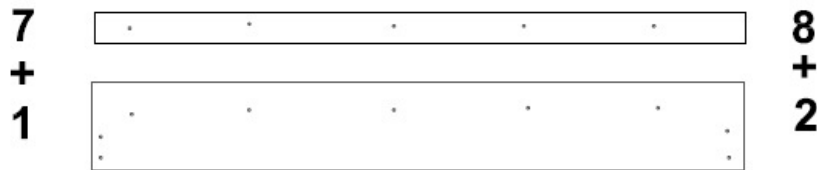


= 2x




2.


1 und 2 + 4

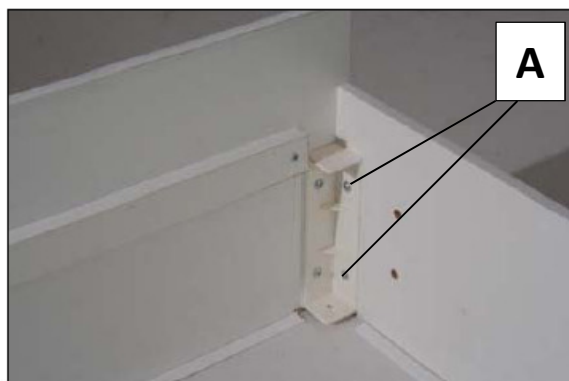




+5

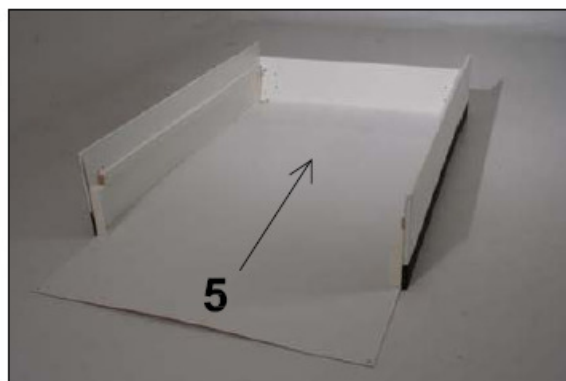


Schrauben fest anziehen
 Serrer les vis
 Utáhněte šrouby
 Strângeți șuruburile
 Dokrećić śruby
 Húzza meg a csavarokat
 Tighten the screws
 Draai de schroeven
 Serrare le viti
 Затянуть винты
 Utiahnite skrutky
 Vidalağı sıkın

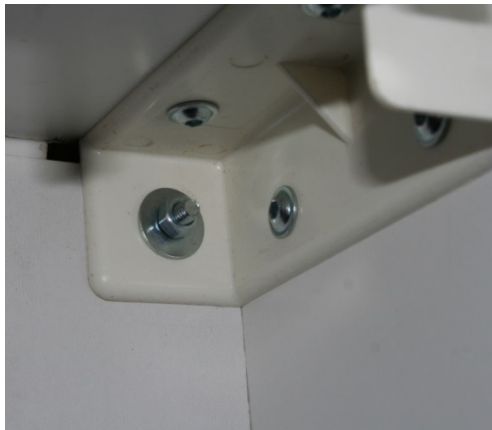3.**Fu2****G****H****4.**

5.

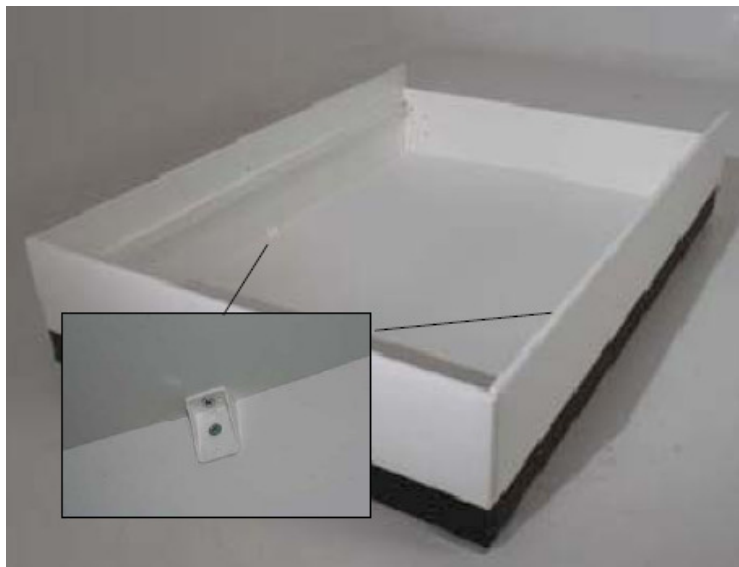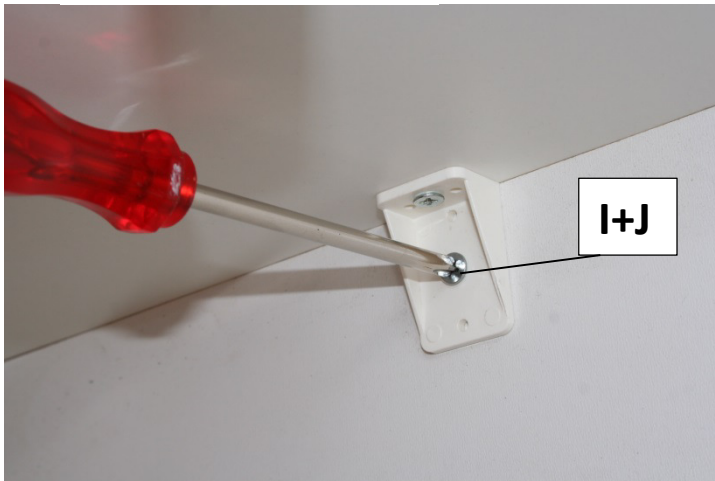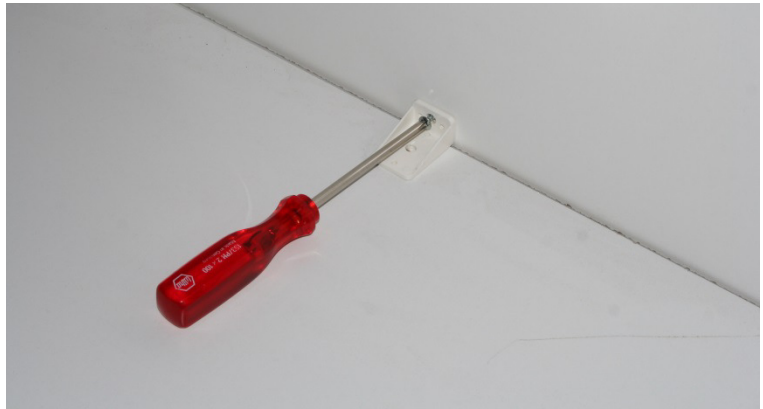



B	C	D
		
2x 8x50	2x M8	2x M8

