

20 MIN


2 X




- (D) AUFBAUANLEITUNG
- (NL) HANDLEIDING VOOR DE MONTAGE
- (TR) MONTAJ TALIMATI
- (RO) INSTRUCIUNI DE ASAMBLARE
- (F) INSTRUCTION D'ASSEMBLAGE
- (CZ) POKYNY K MONTÁŽI
- (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
- (HR) UPUTSTVA ZA MONTAŽU

- (GB) ASSEMBLY INSTRUCTIONS
- (PL) INSTRUKCJA MONTAŻU
- (RU) Инструкция по монтажу
- (I) PROCEDURA DI ASSEMBLAGGIO
- (SK) POKYNY K MONTÁŽI
- (HU) ÖSSZESZERELÉSI ÚTMUTATÓ
- (SLO) NAVODILA ZA MONTAŽO
- (S) MONTERINGSANVISNING
- (LT) DIEGIMO INSTRUKCIJOS
- (E) INSTRUCCIONES DE MONTAJE

MODEL "ORION"






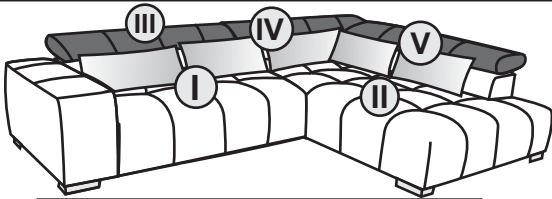


3-OTM INK 4x74x31/1x82x31

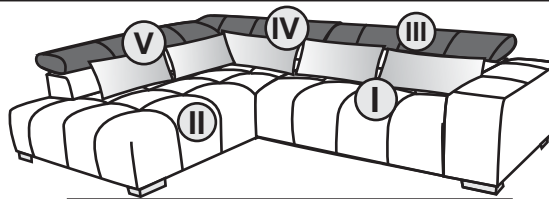

OTM-3 INK 4x74x31/1x82x31

1/1



hardware bag/sachet matériel/zubehörbeutel/sachetti materiale/bolsa de materiales/worek materiałowy pre-assembled/ pre assemble/vormontiert/premontato/wstępnie/zamontowane

1 Unfold the sofa base.

2 Attach backrest (I) using wheels (D) and caps (C). Insert screw (E) and use Allen key (F) to tighten.

3 Attach backrest (II) using caps (C).

4 Attach seat cushions (III, IV, V) using clips (B) and the 'clickit!' system.

101-10.08.2022

