



(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE










(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SL) ASSEMBLY INSTRUCTIONS
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS

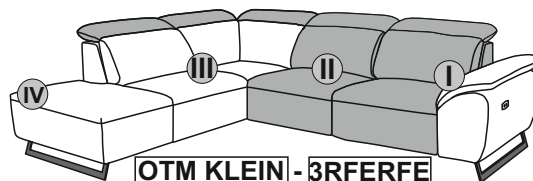


„ATHENE”

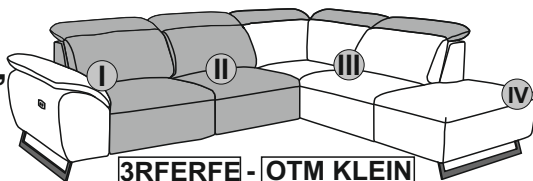

1/4

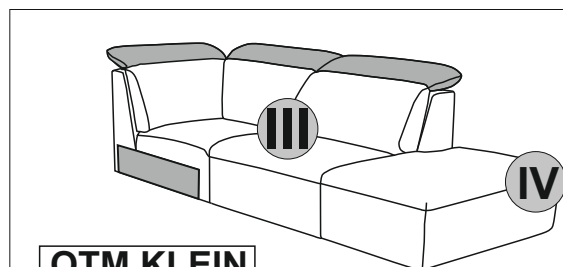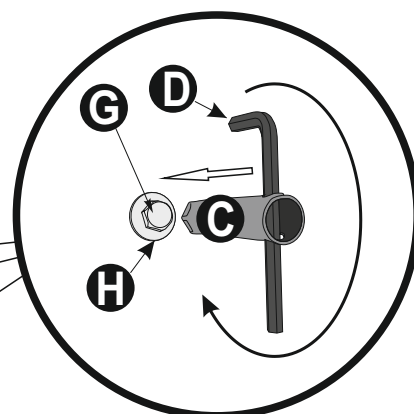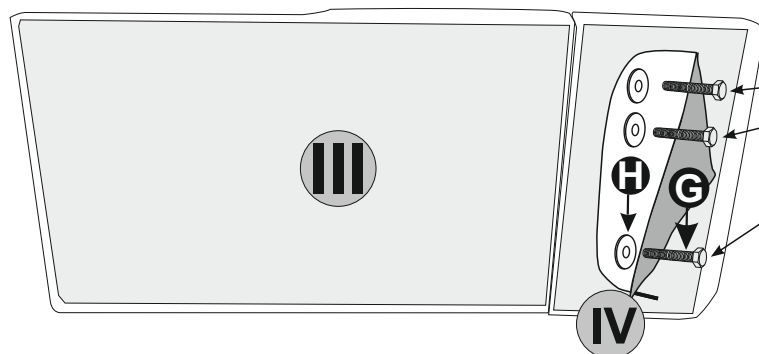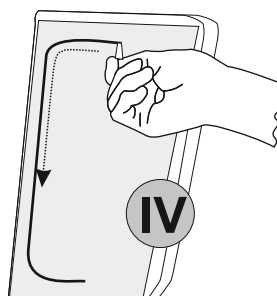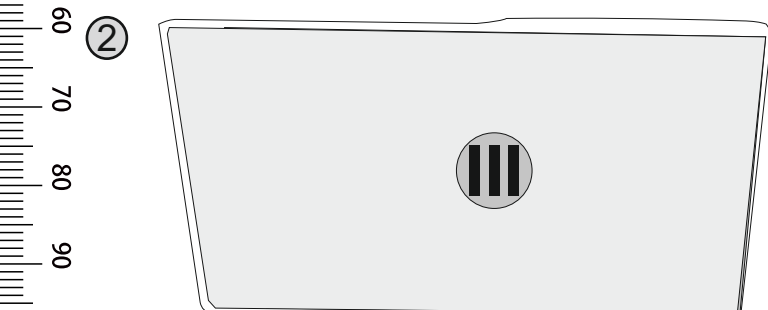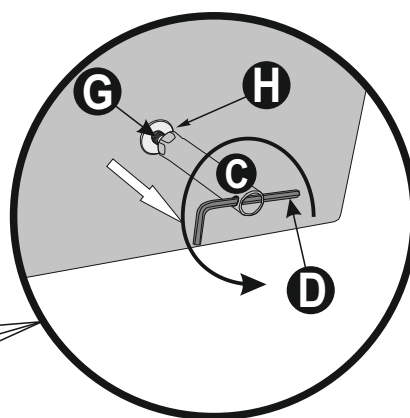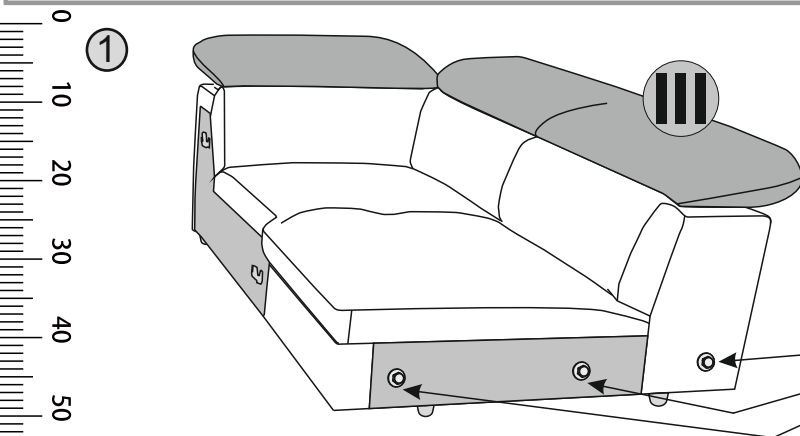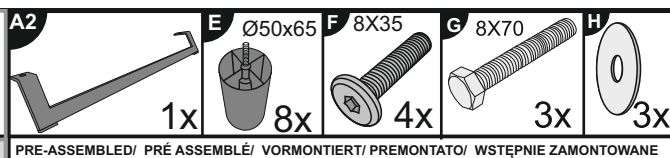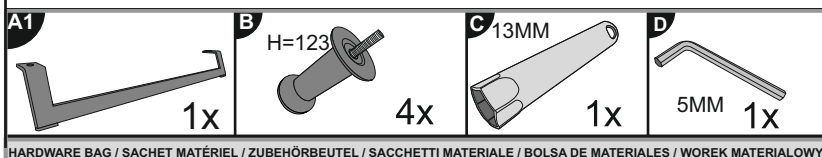

OTM KLEIN

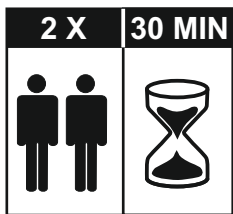


(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE


(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SL) ASSEMBLY INSTRUCTIONS
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS



„ATHENE”

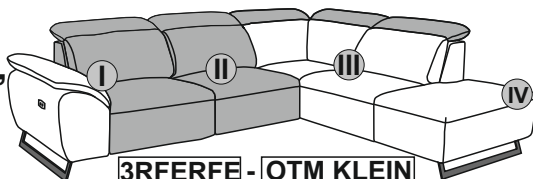


3RFERFE - OTM KLEIN

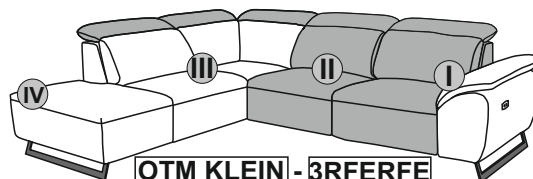

OTM KLEIN - 3RFERFE

2/4

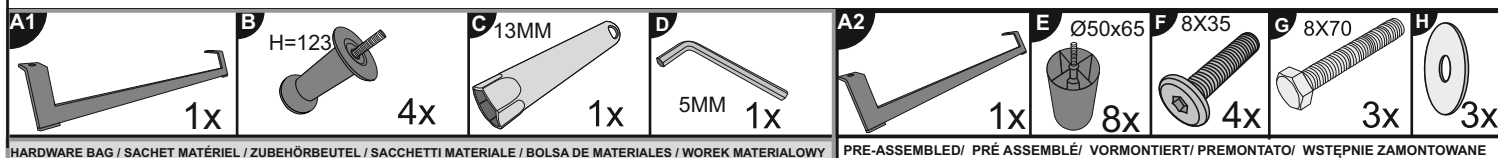

3


A1/A2

1/2

2/2

B

E

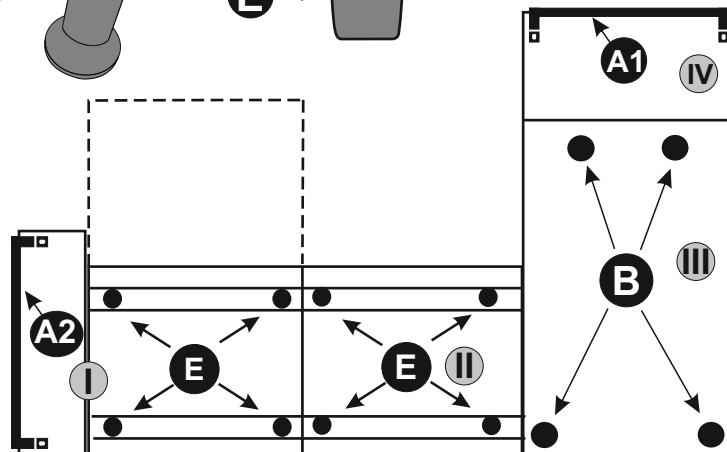


RFE AT

RFE

OTM KLEIN

4

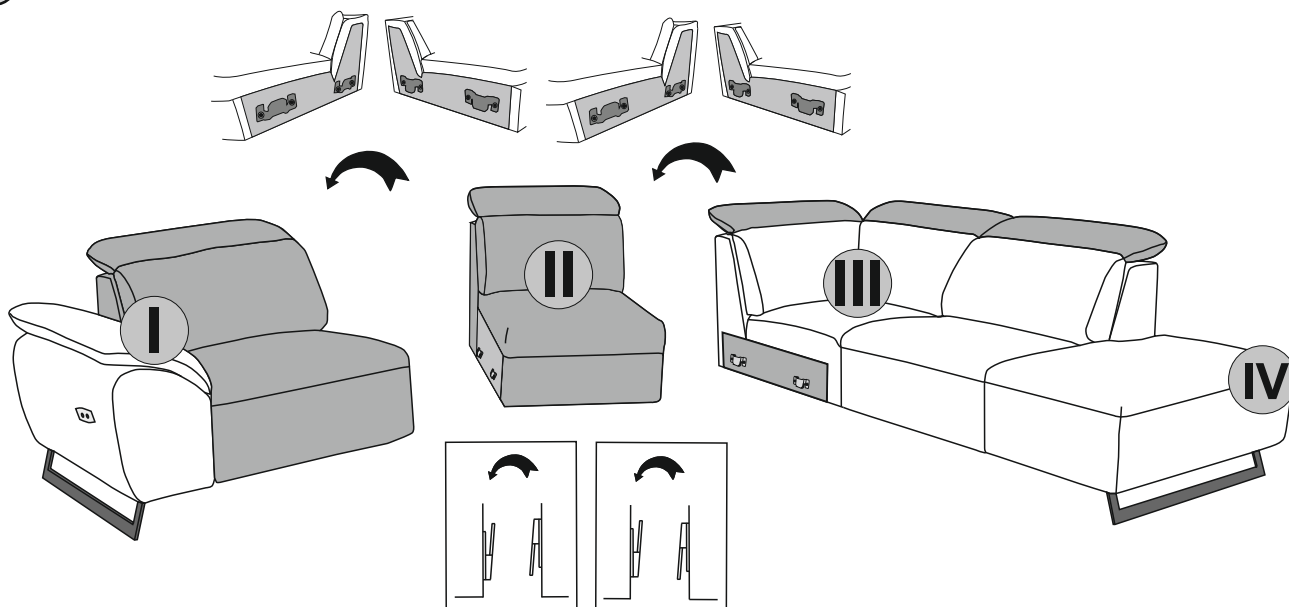

2 X

30 MIN

- D

AUFBAUANLEITUNG
- NL

HANDLEIDING VOOR DE MONTAGE
- TR

MONTAJ TALIMATI
- RO

INSTRUCȚIUNI DE ASAMBLARE
- F

INSTRUCTION D'ASSEMBLAGE
- CZ

POKYNY K MONTÁŽI
- BG

ИНСТРУКЦИИ ЗА МОНТАЖ
- HR

NAPUTCI ZA MONTAŽU
- E

INSTRUCCIONES DE MONTAJE
- GB

ASSEMBLY INSTRUCTIONS
- PL

INSTRUKCJA MONTAŻU
- RU

Инструкция по монтажу
- I

PROCEDURA DI ASSEMBLAGGIO
- SK

POKYNY K MONTÁŽI
- HU

KÖZGYŰLÉS UTASÍTÁSOK
- SLD


ASSEMBLY INSTRUCTIONS
- S

MONTERINGSANVISNING
- LT


DIEGIMO INSTRUKCIJOS



„ATHENE”

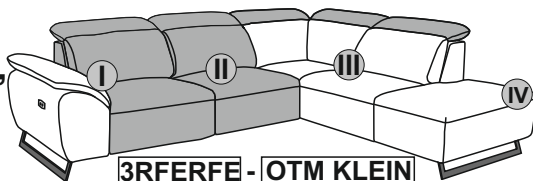

3RFERFE - OTM KLEIN

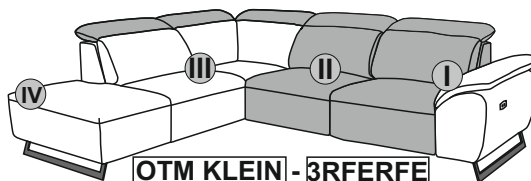


OTM KLEIN - 3RFERFE

3/4

5a


3RFERFE - OTM KLEIN

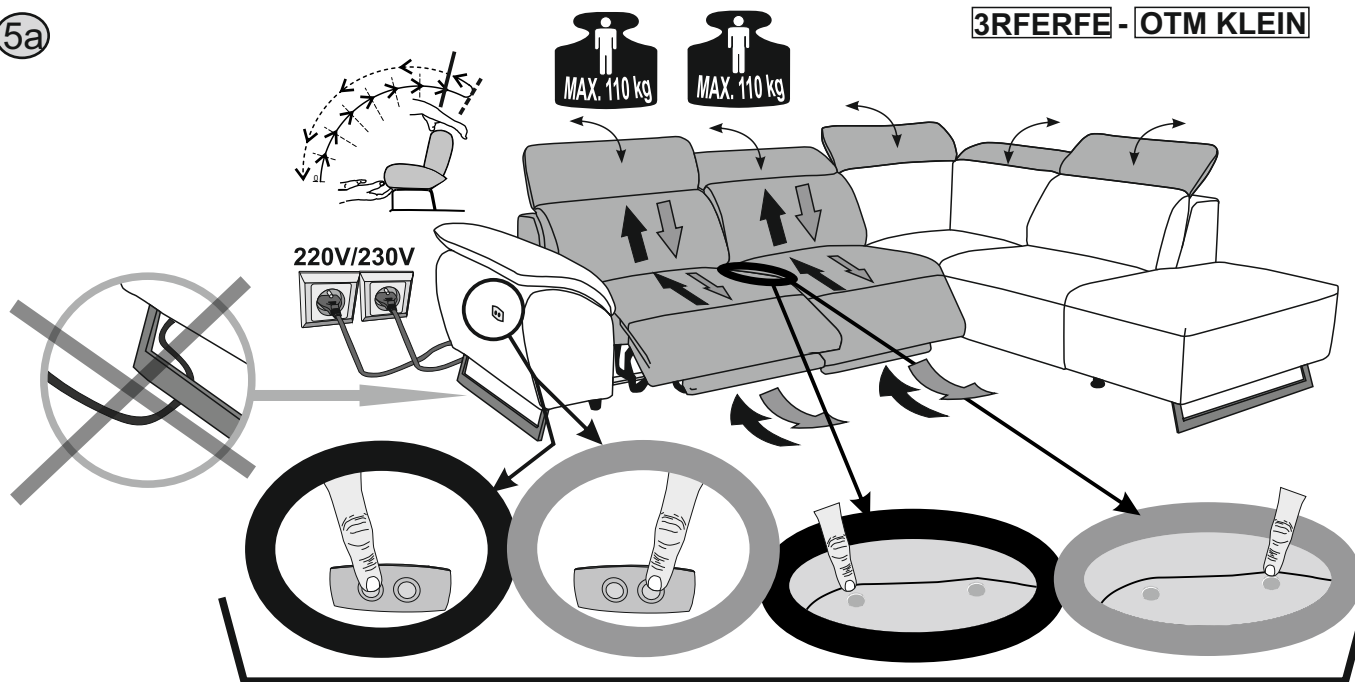


ON MAX 2min. → OFF 18min. → ON MAX 2min. → ...

5b

OTM KLEIN - 3RFERFE



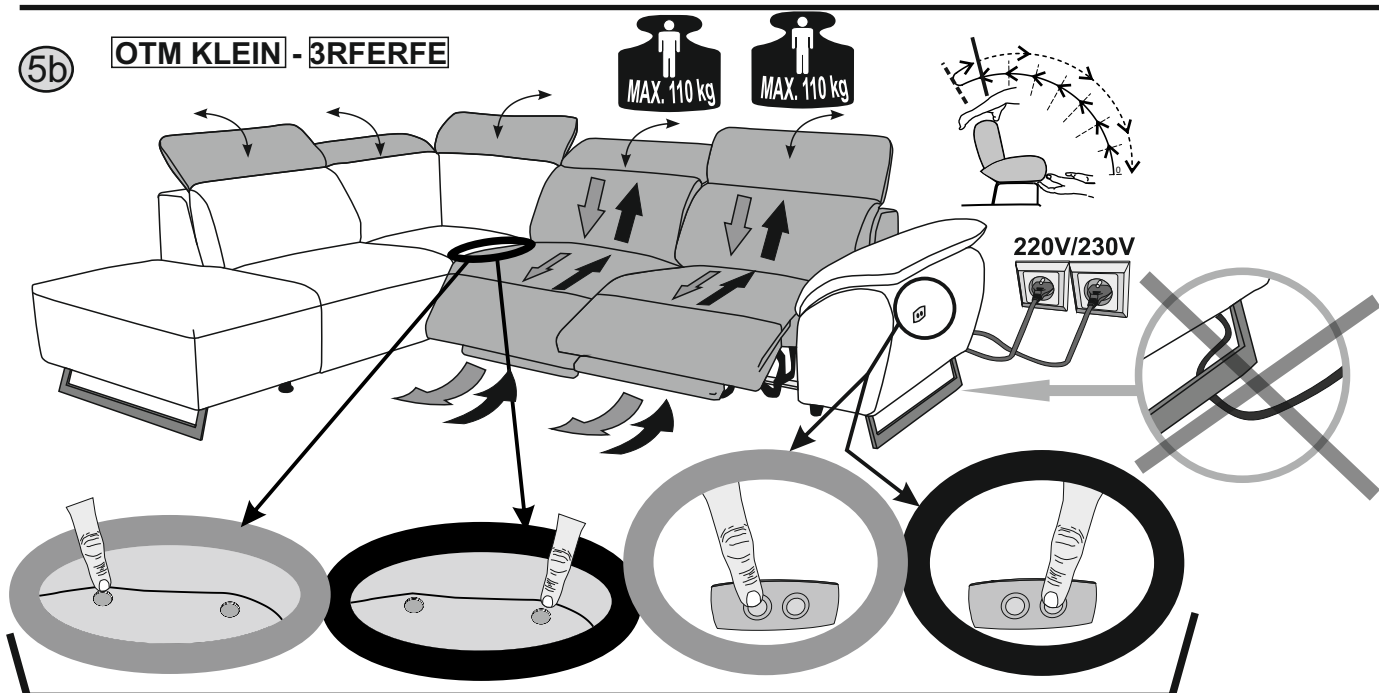


ON MAX 2min. → OFF 18min. → ON MAX 2min. → ...

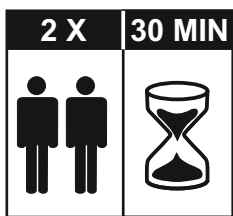

(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SL) ASSEMBLY INSTRUCTIONS
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS

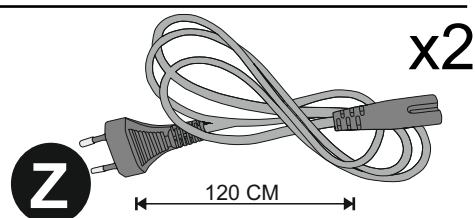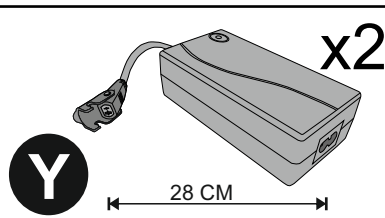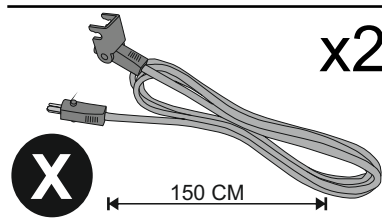

4/4

RFE

